




**Fig. 1**

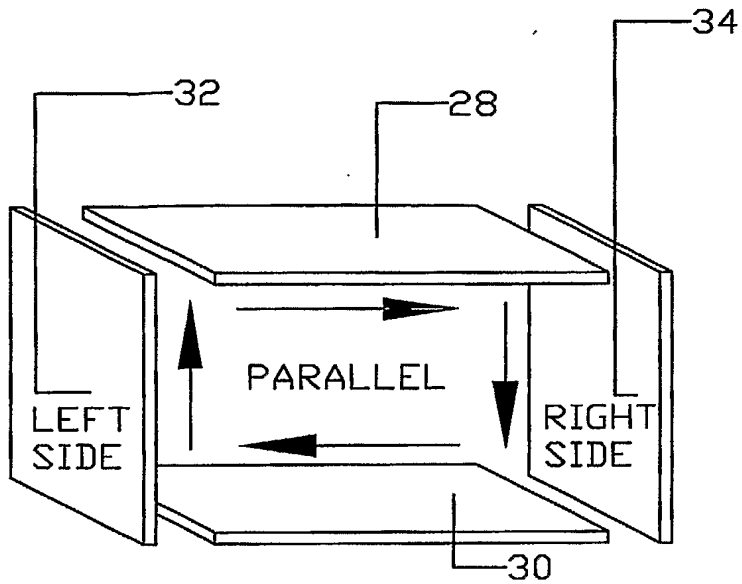


(A)

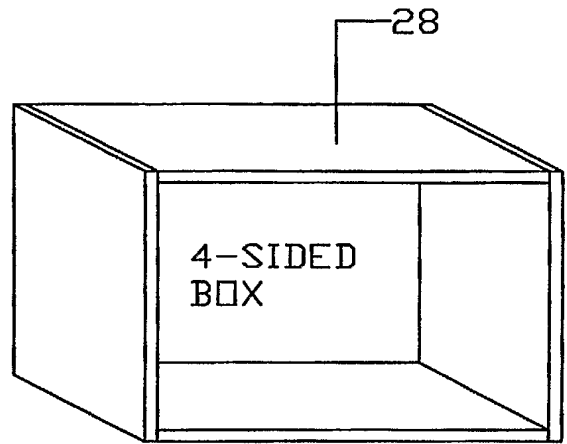

(B)

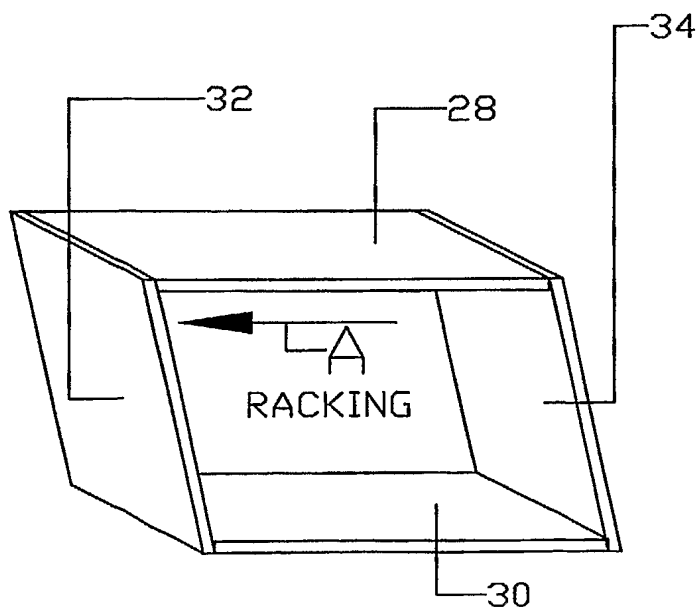


(C)

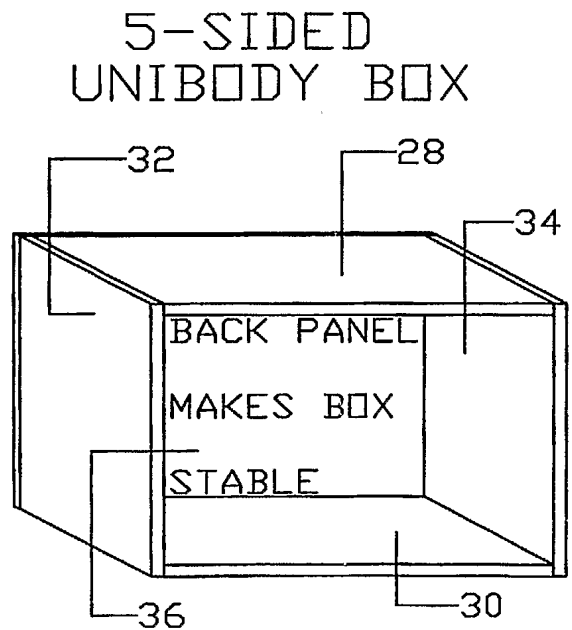

(D)

**Fig. 2**

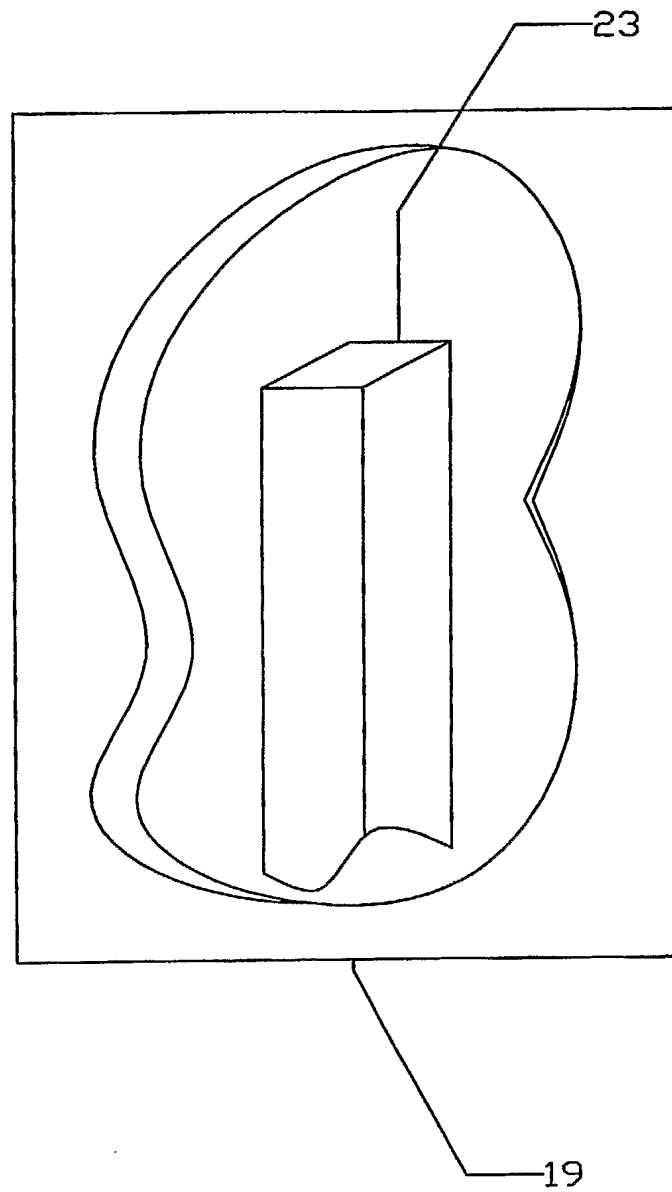

**Fig. 3**



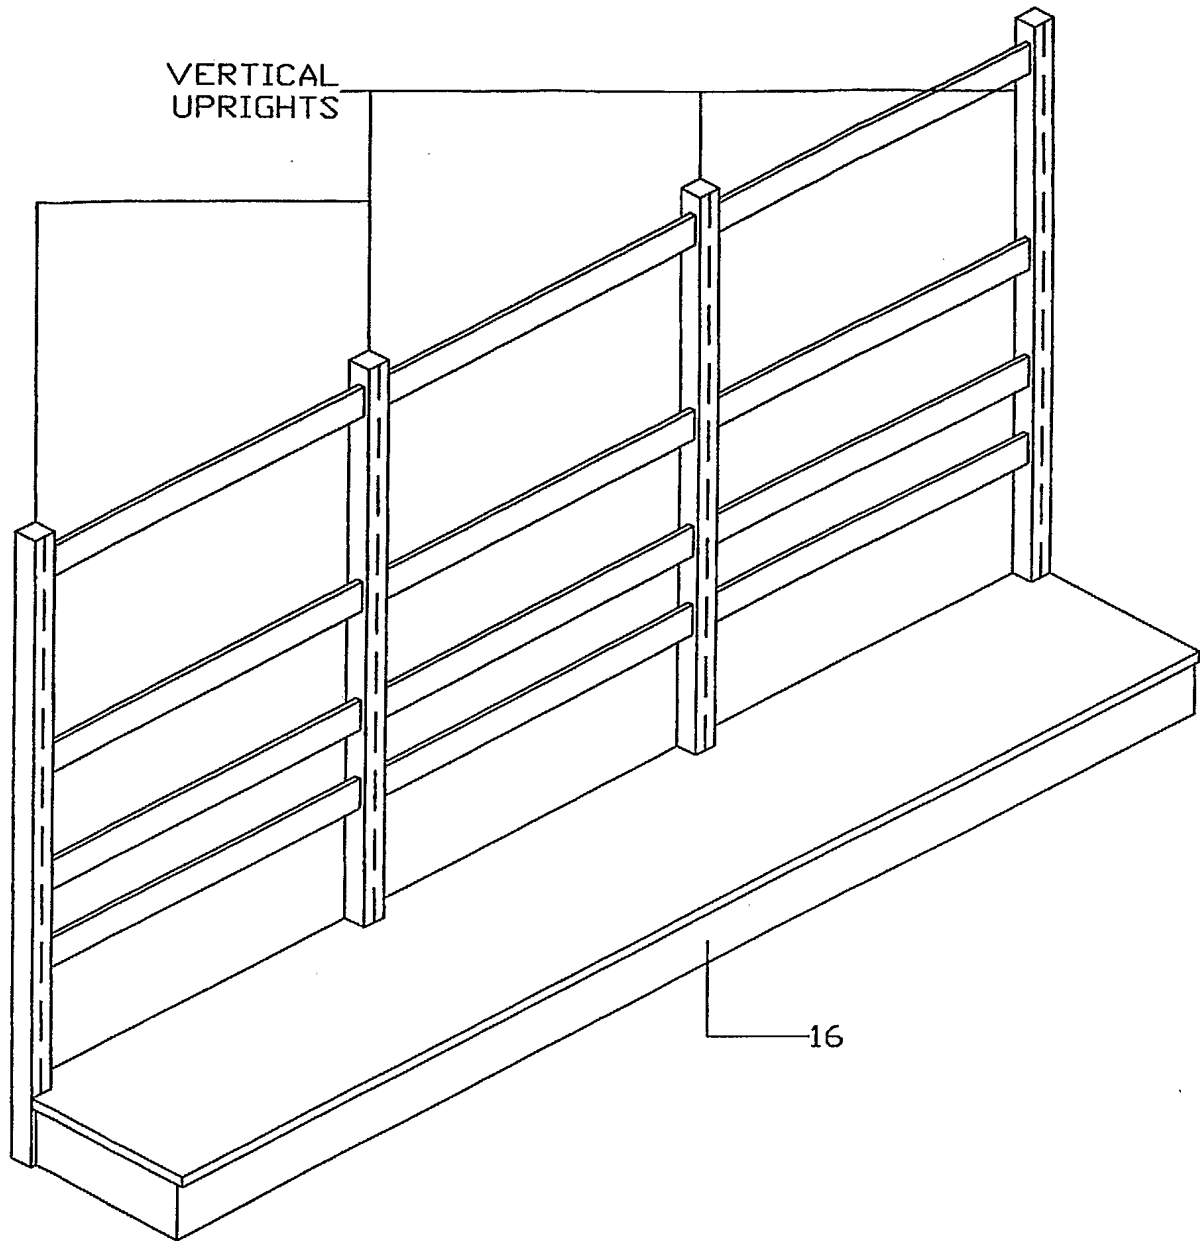



Fig. 4

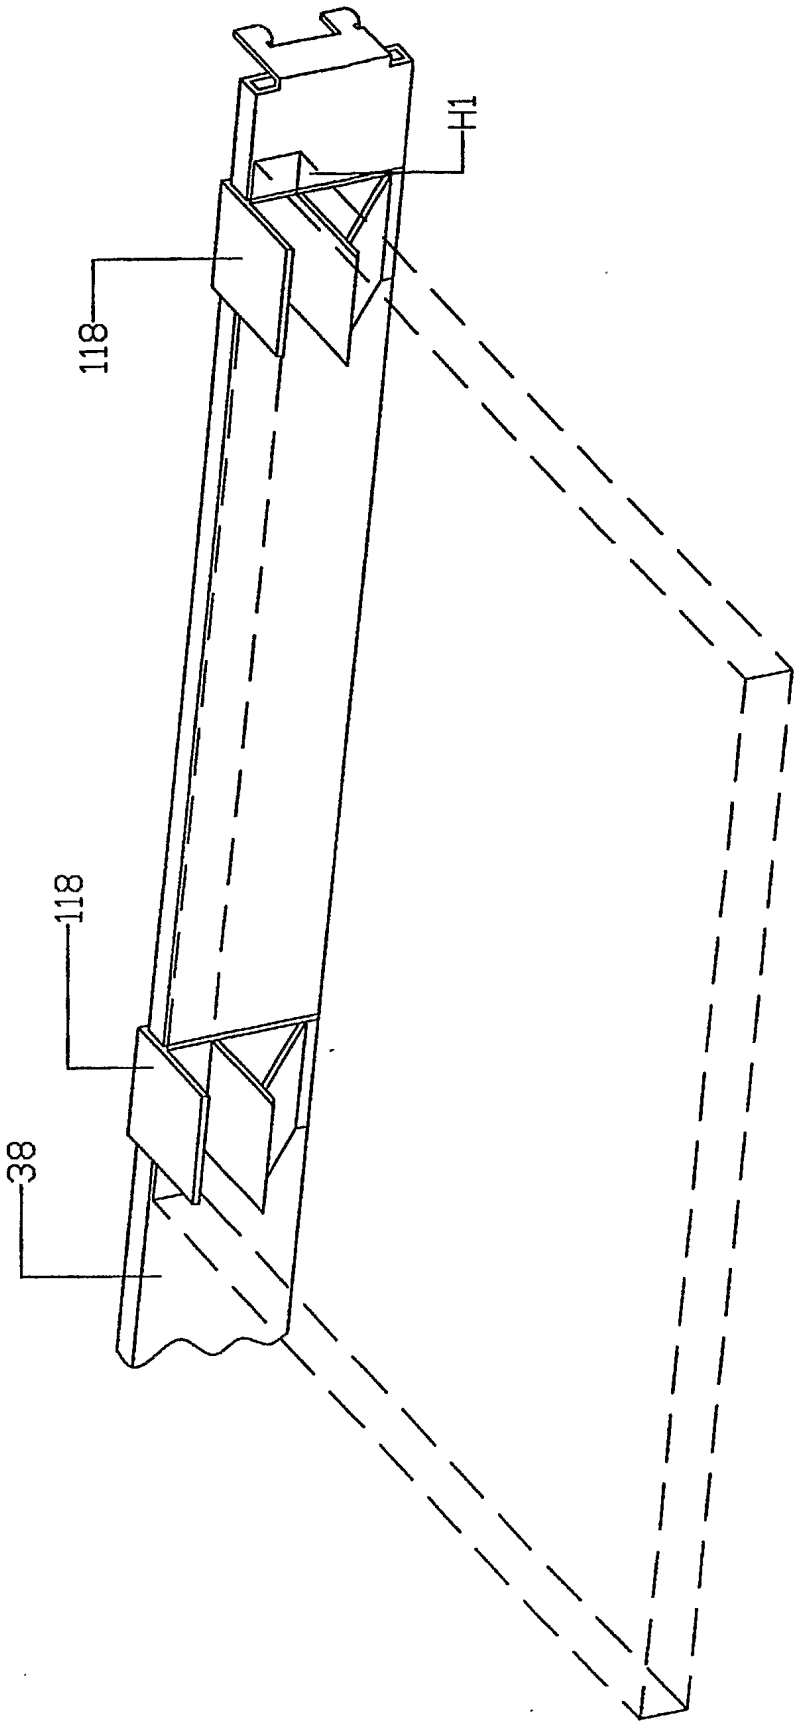


**Fig. 4A**

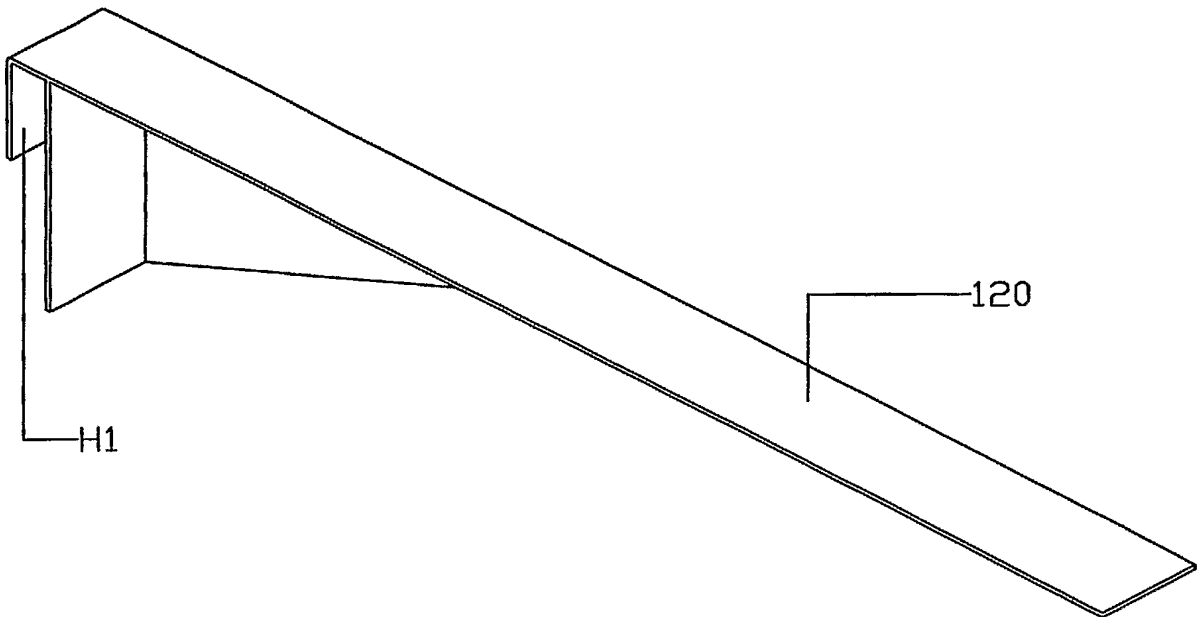


**Fig. 4B**

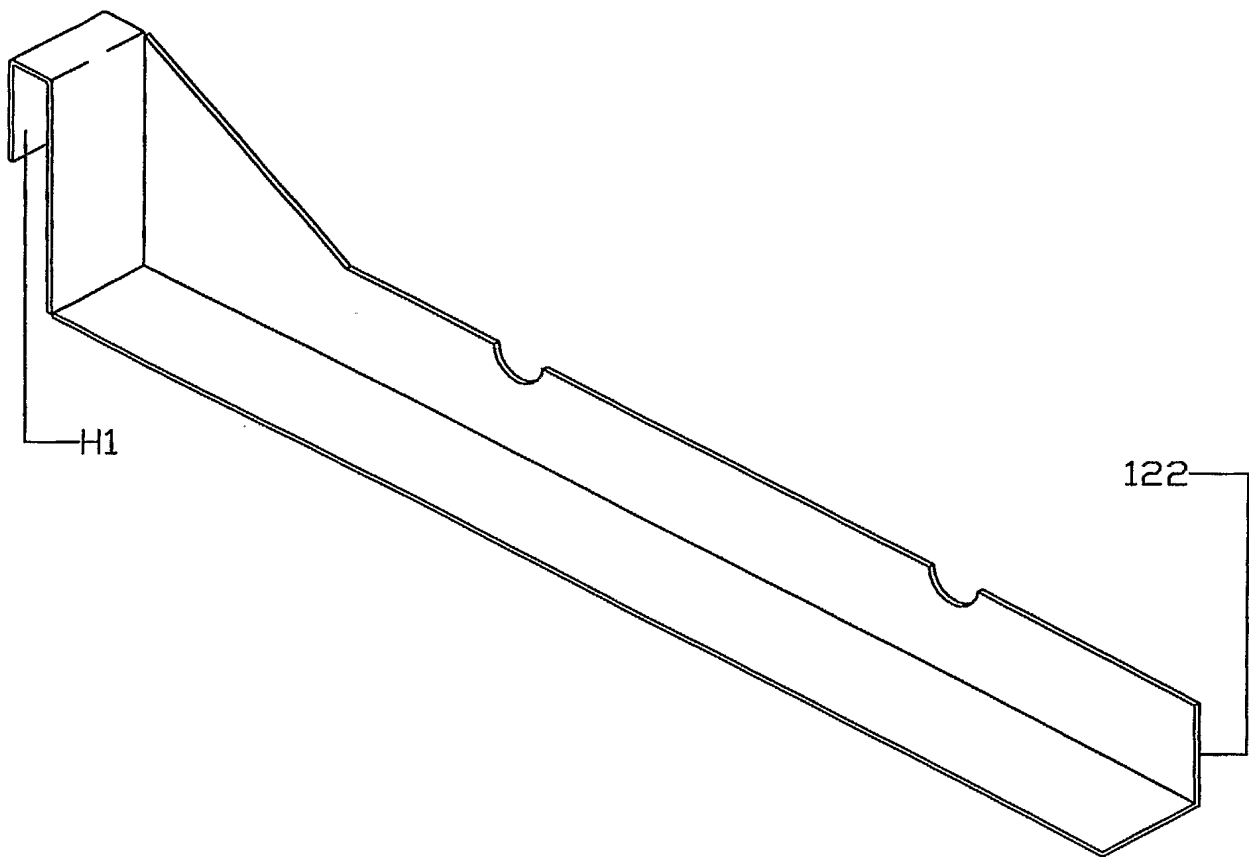


**Fig. 5**

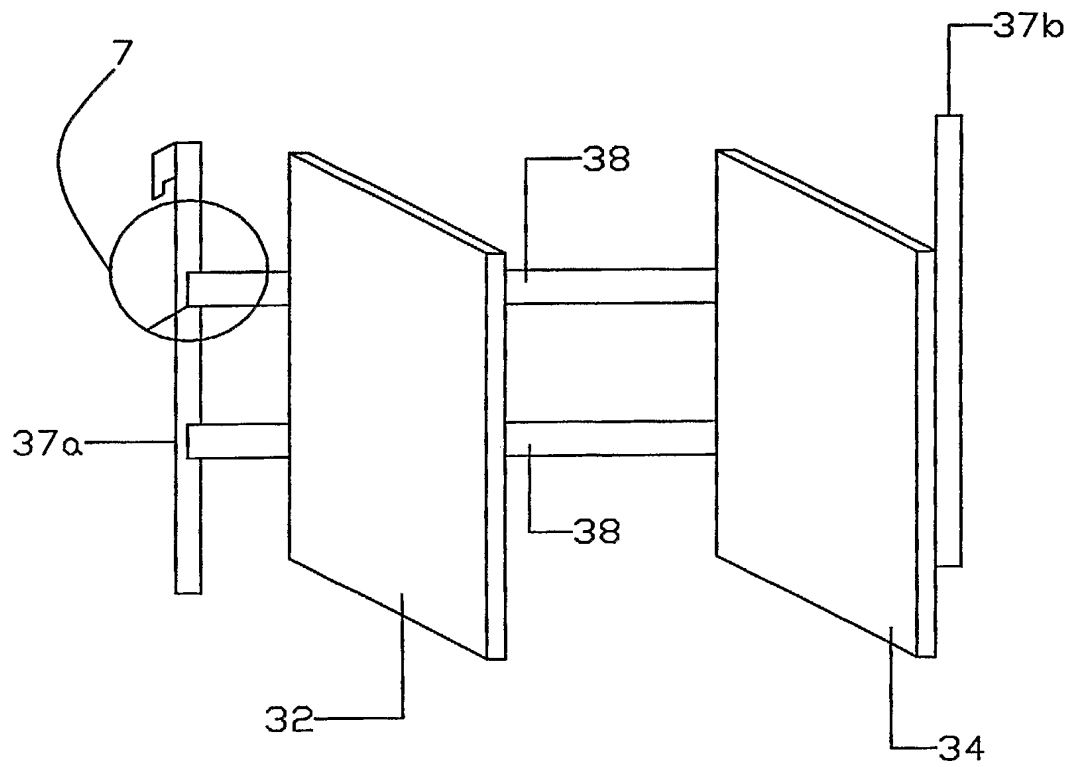


**Fig. 6**

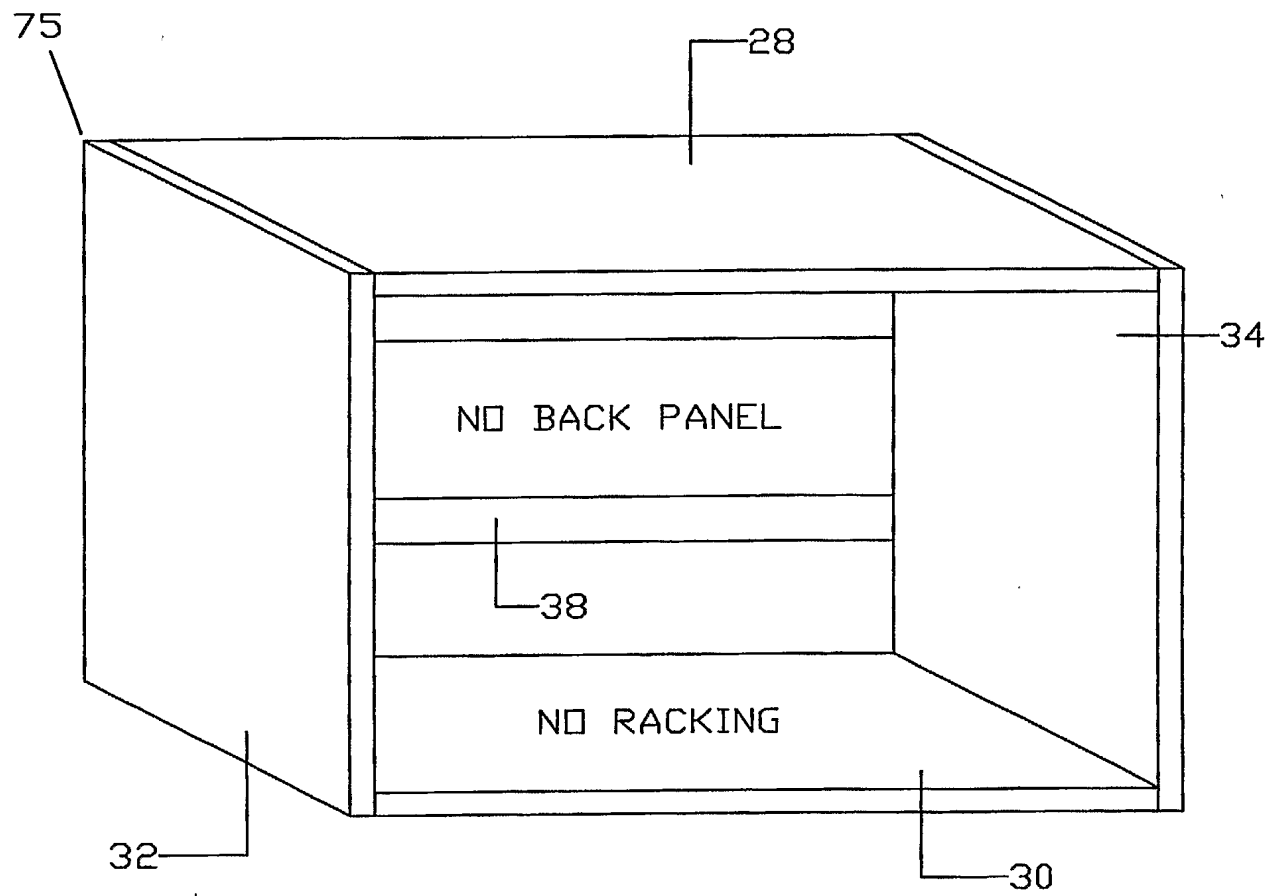


**Fig. 7**

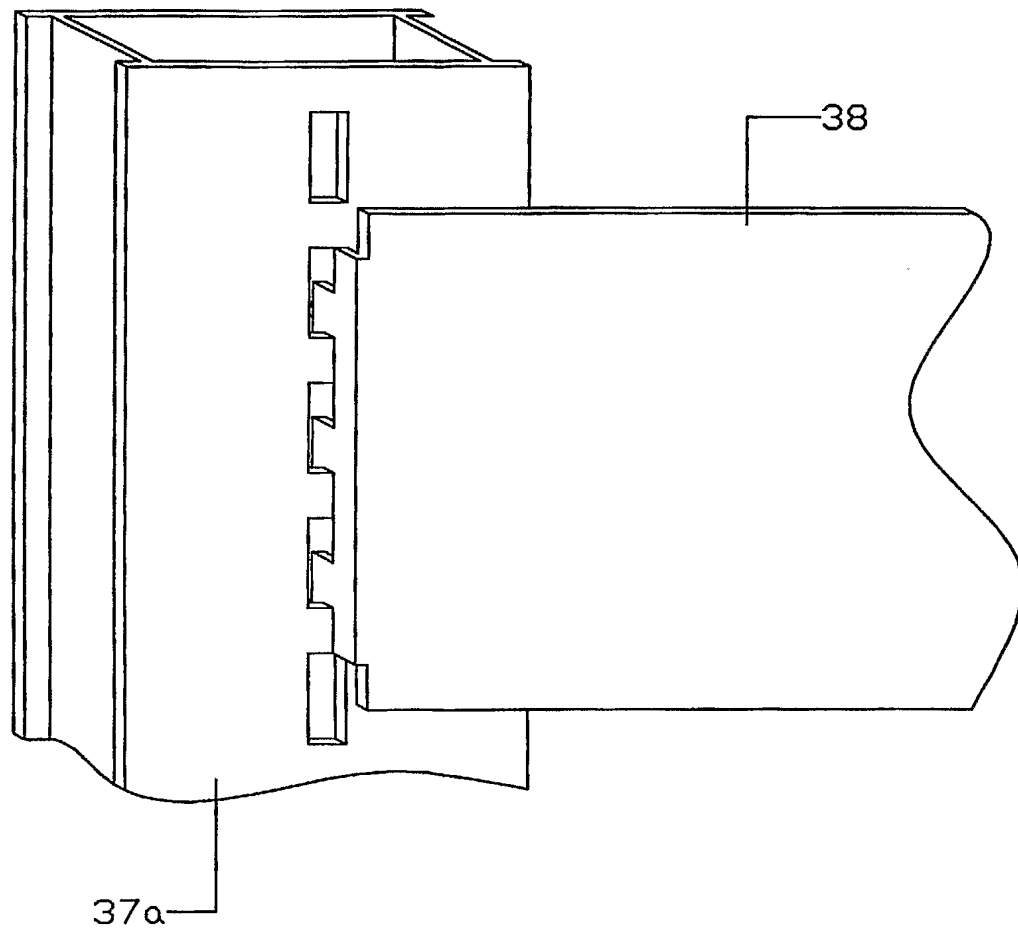


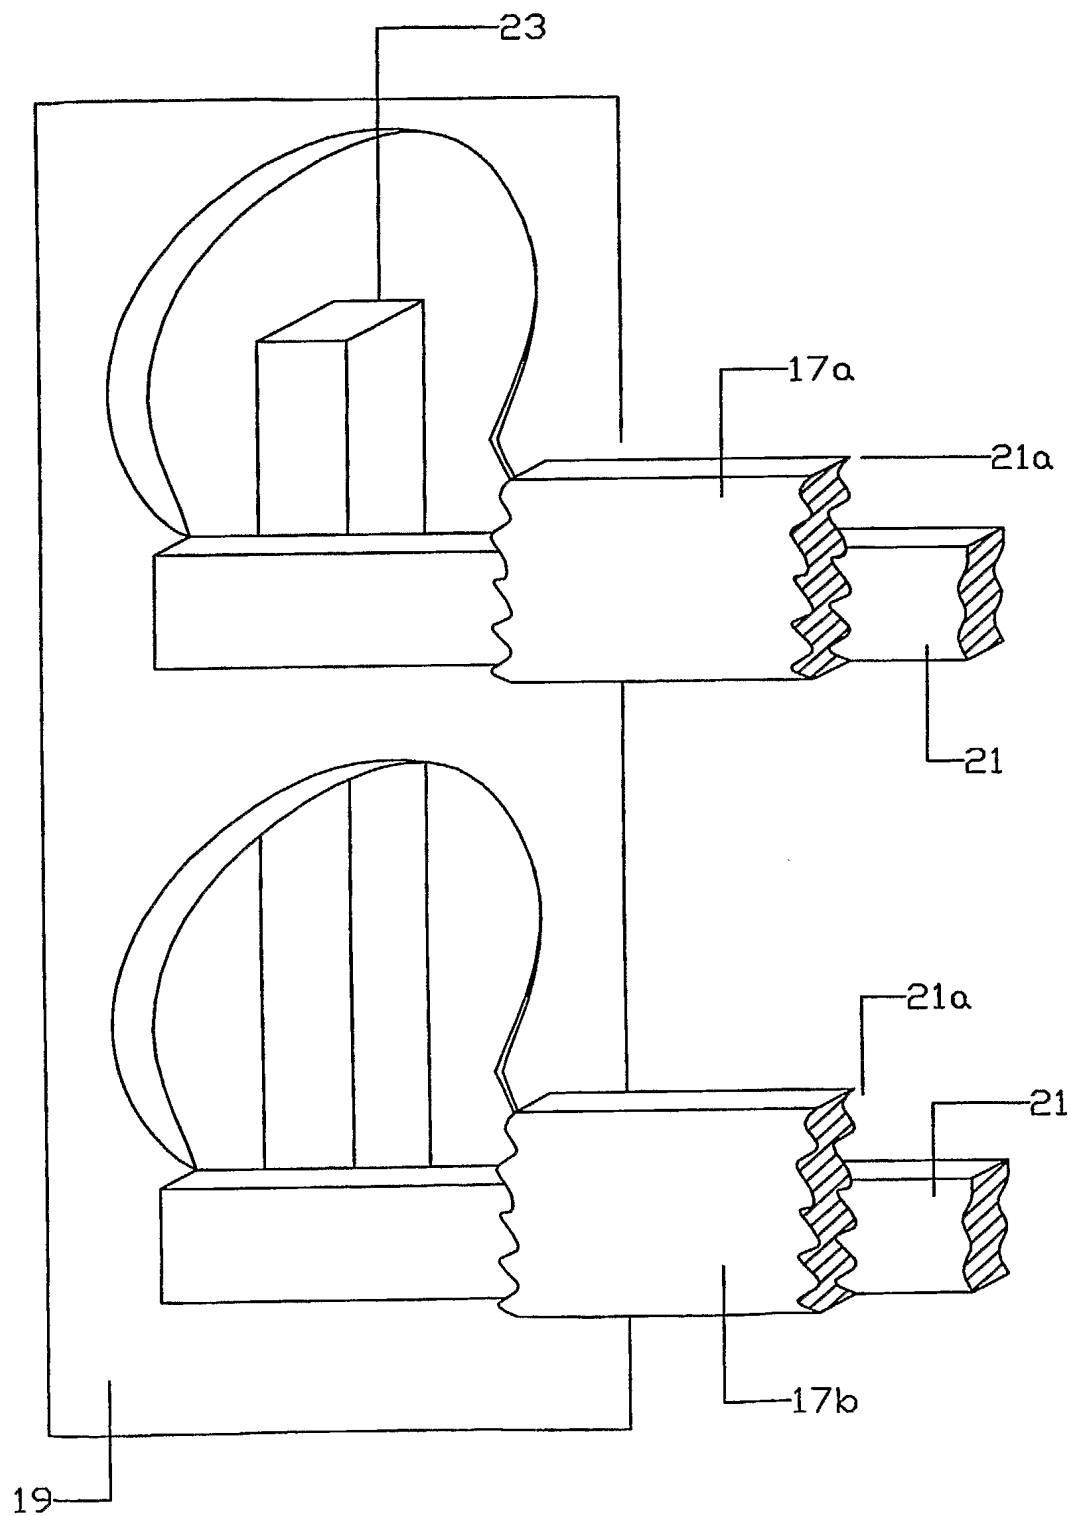
**Fig. 8**

**Fig. 09**

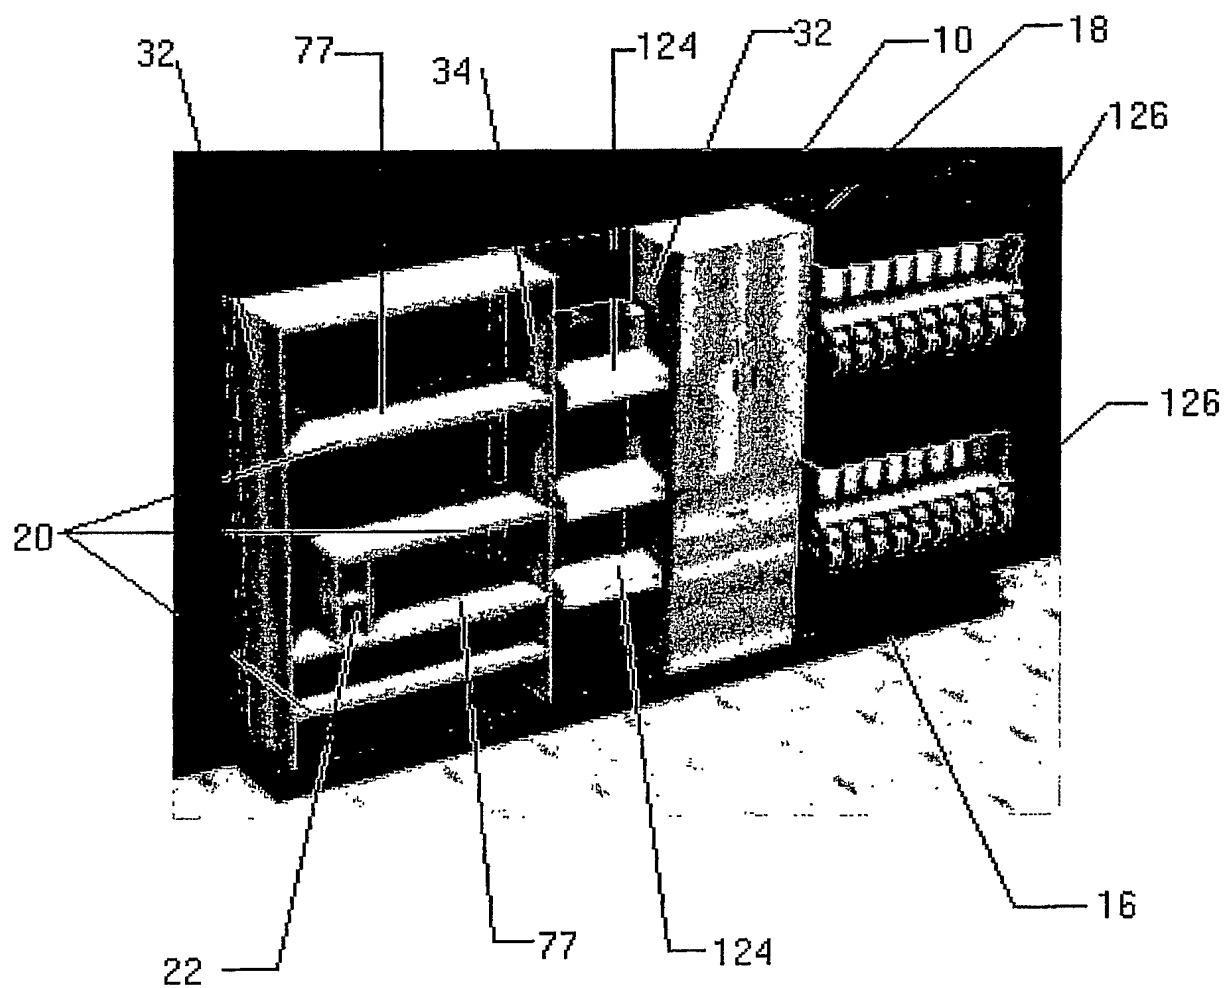


**Fig. 10**

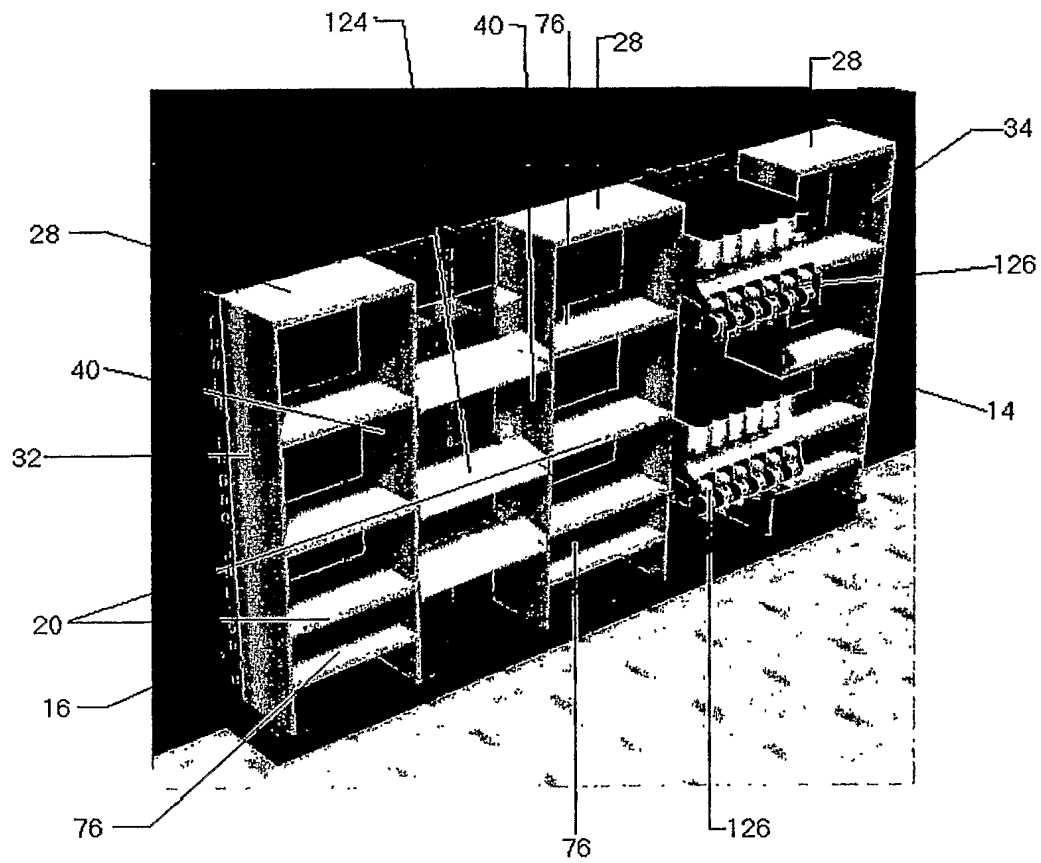


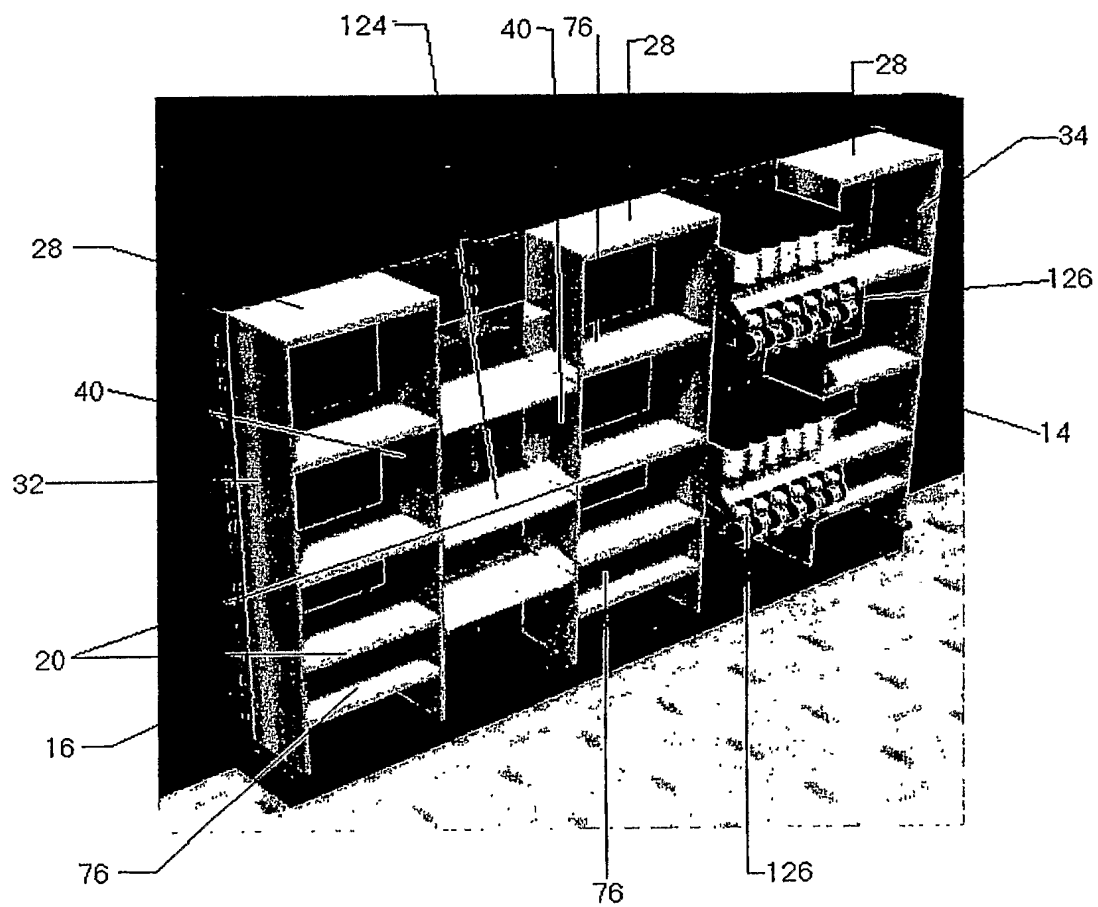**Fig. 11**


**Fig. 11A**

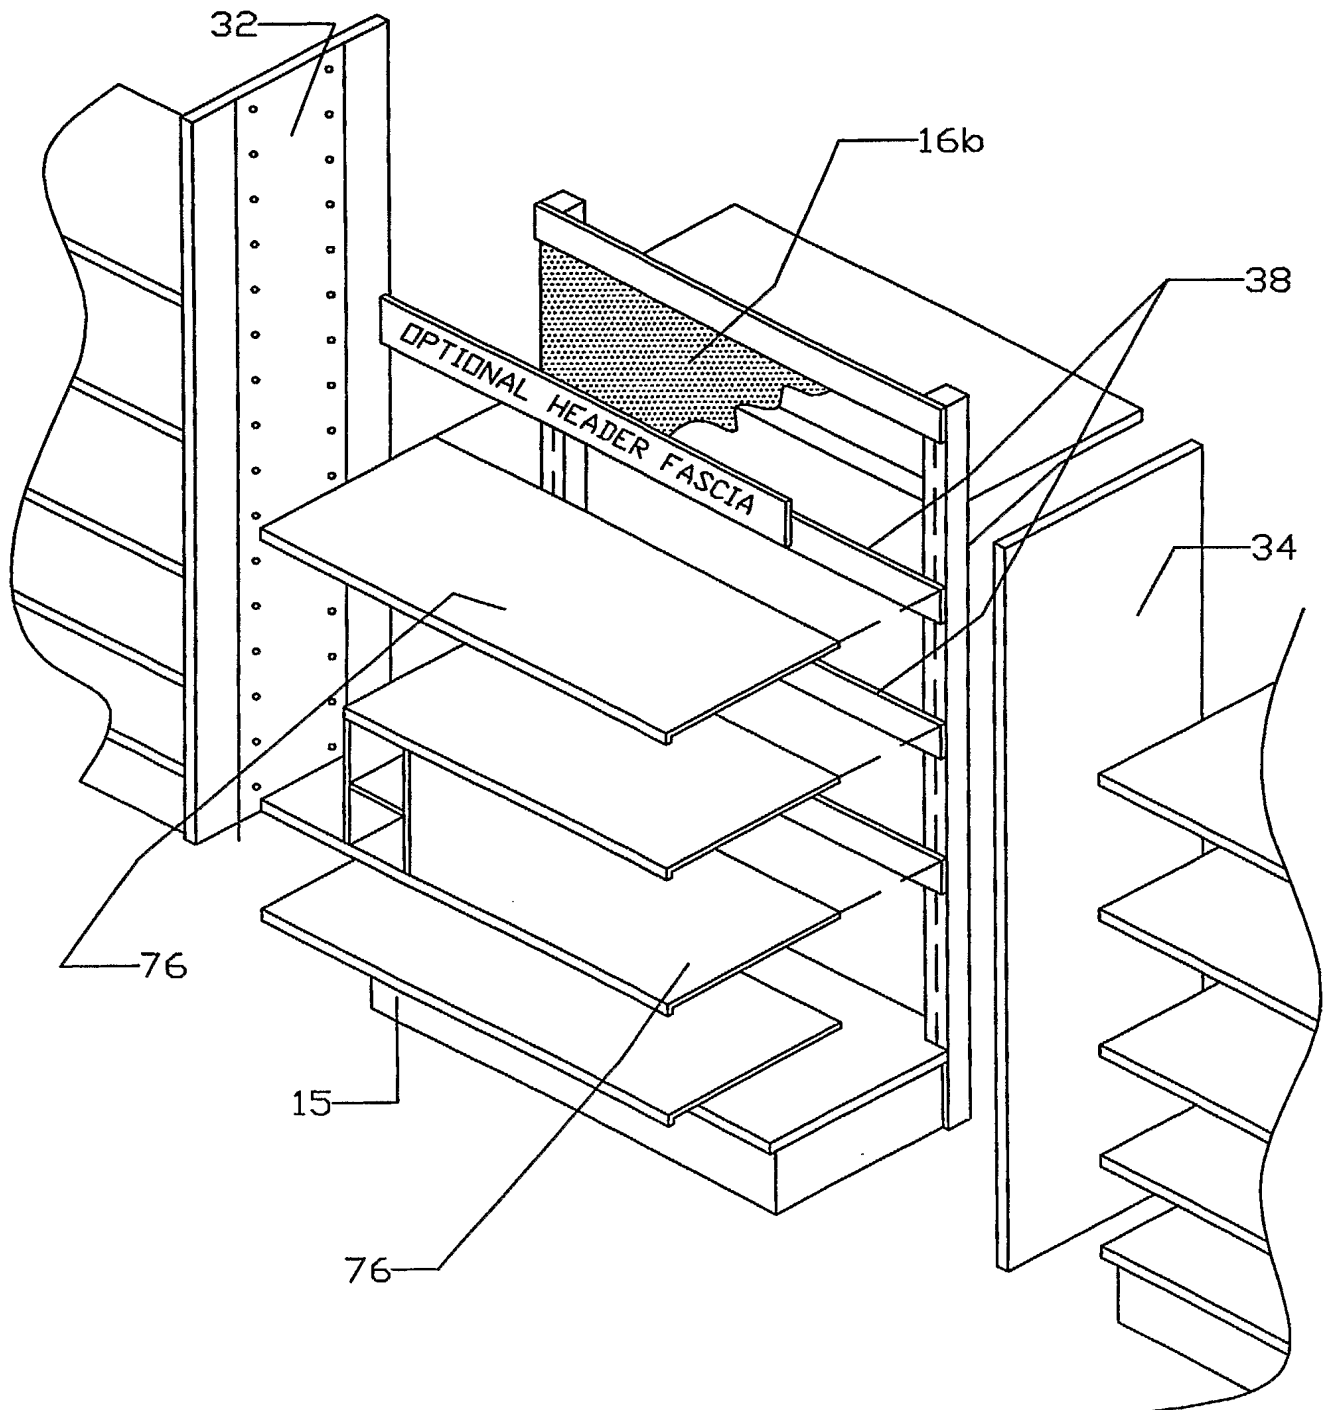


**Fig. 12**

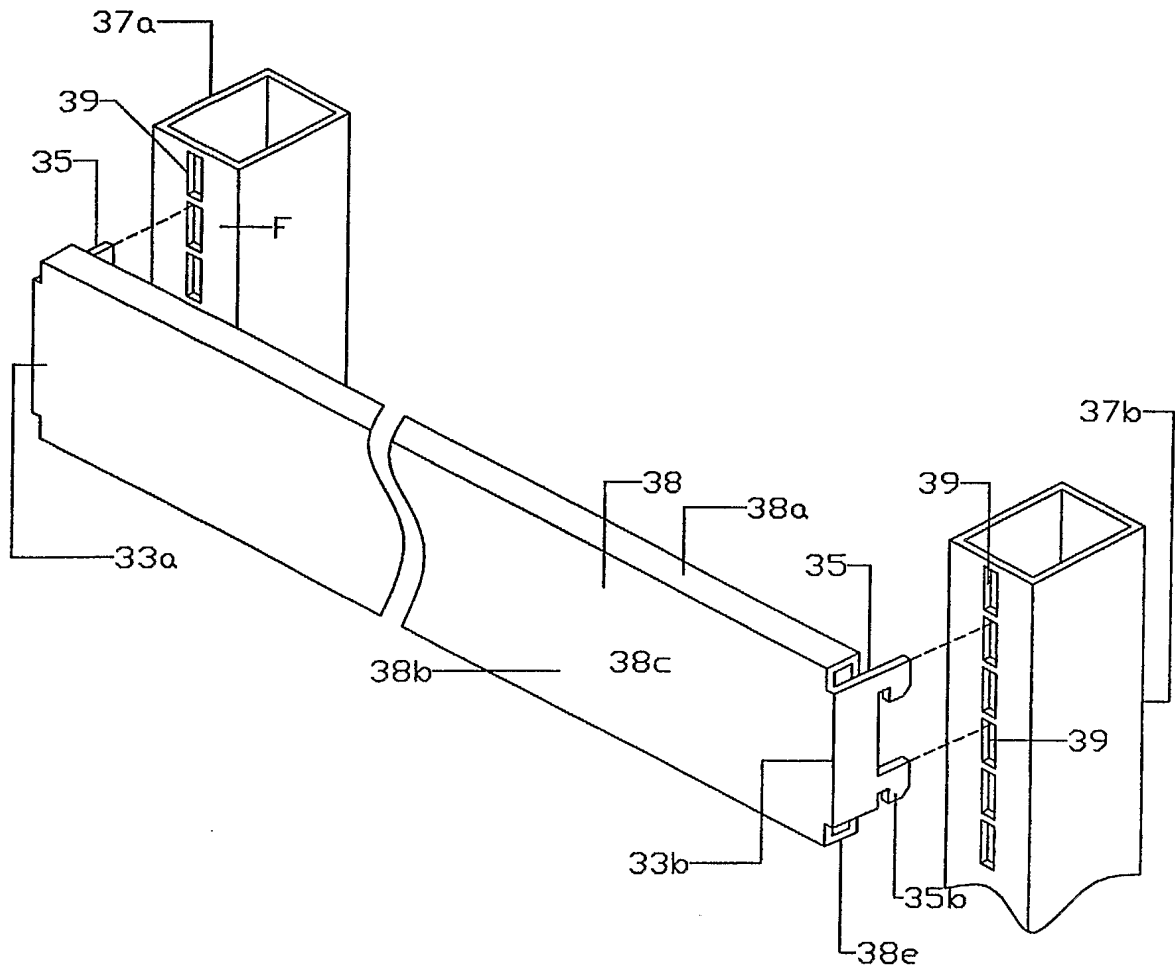


**Fig. 13**

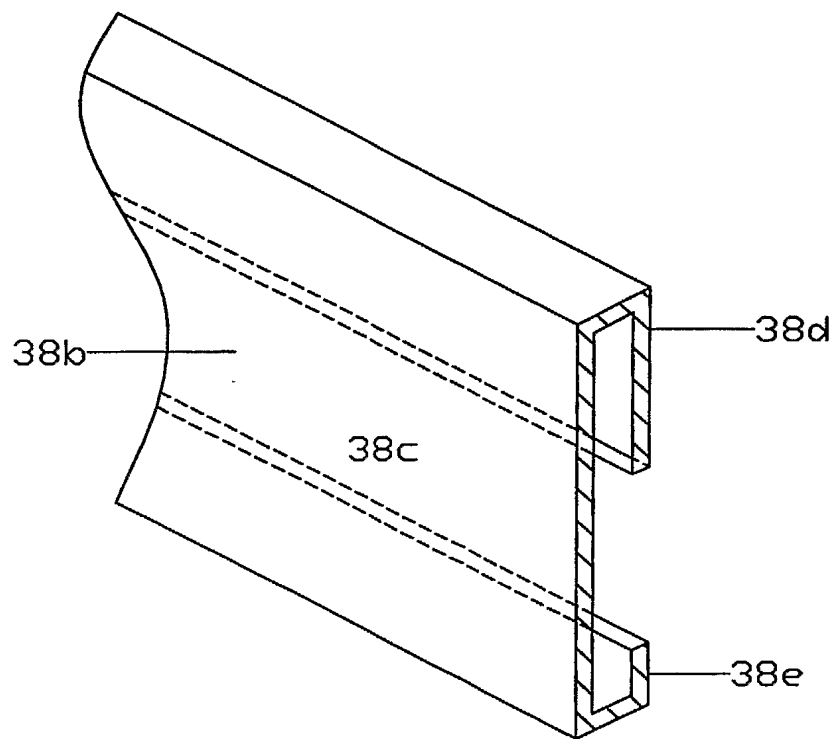



**Fig. 14**

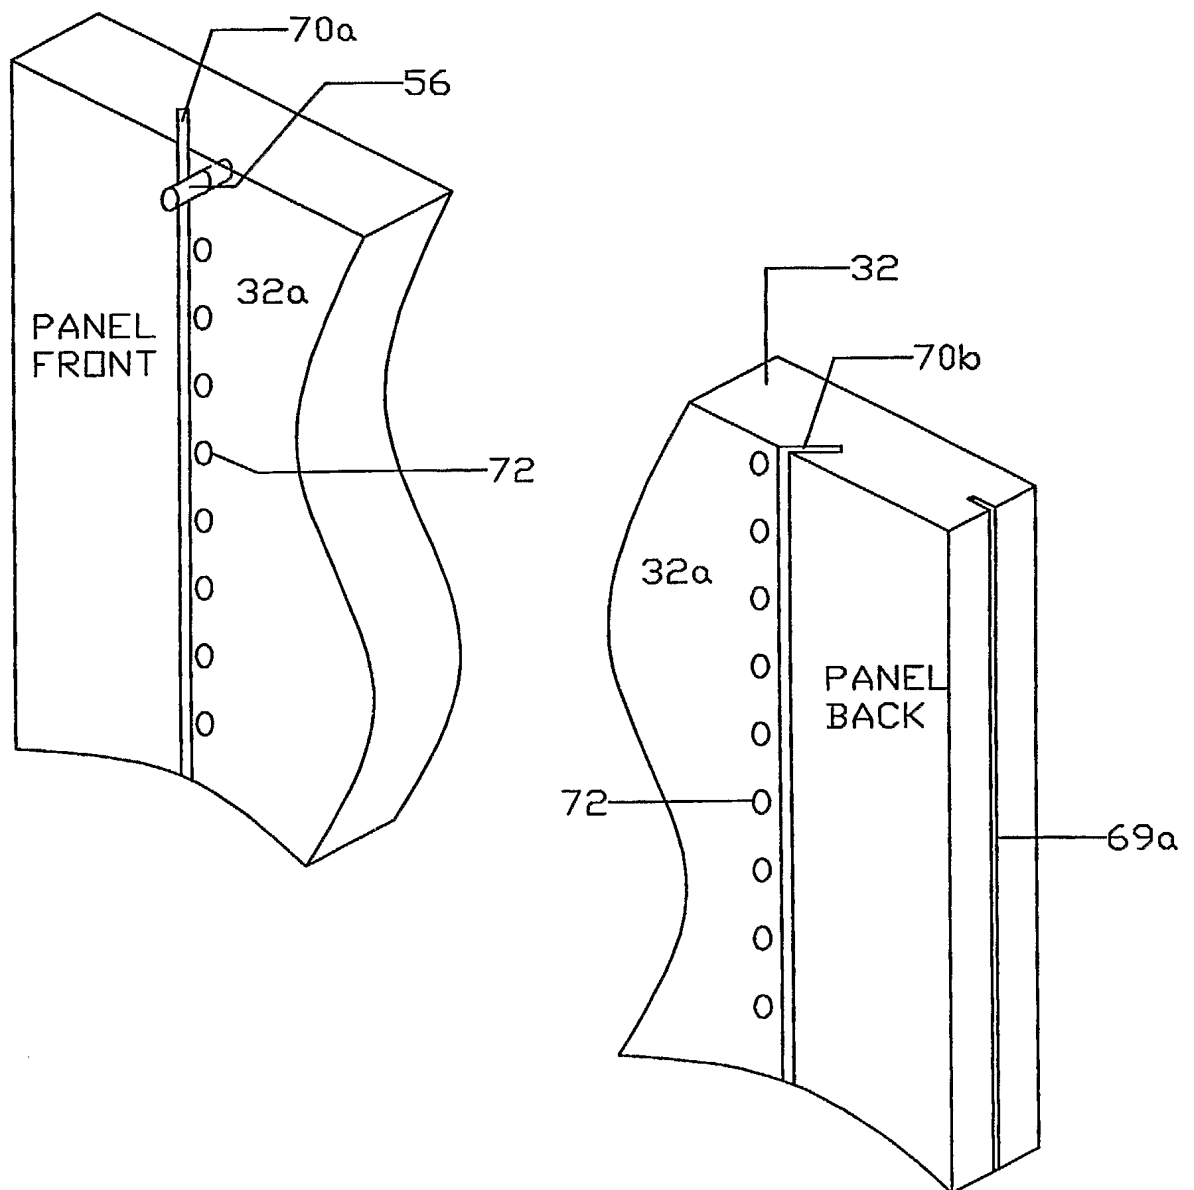

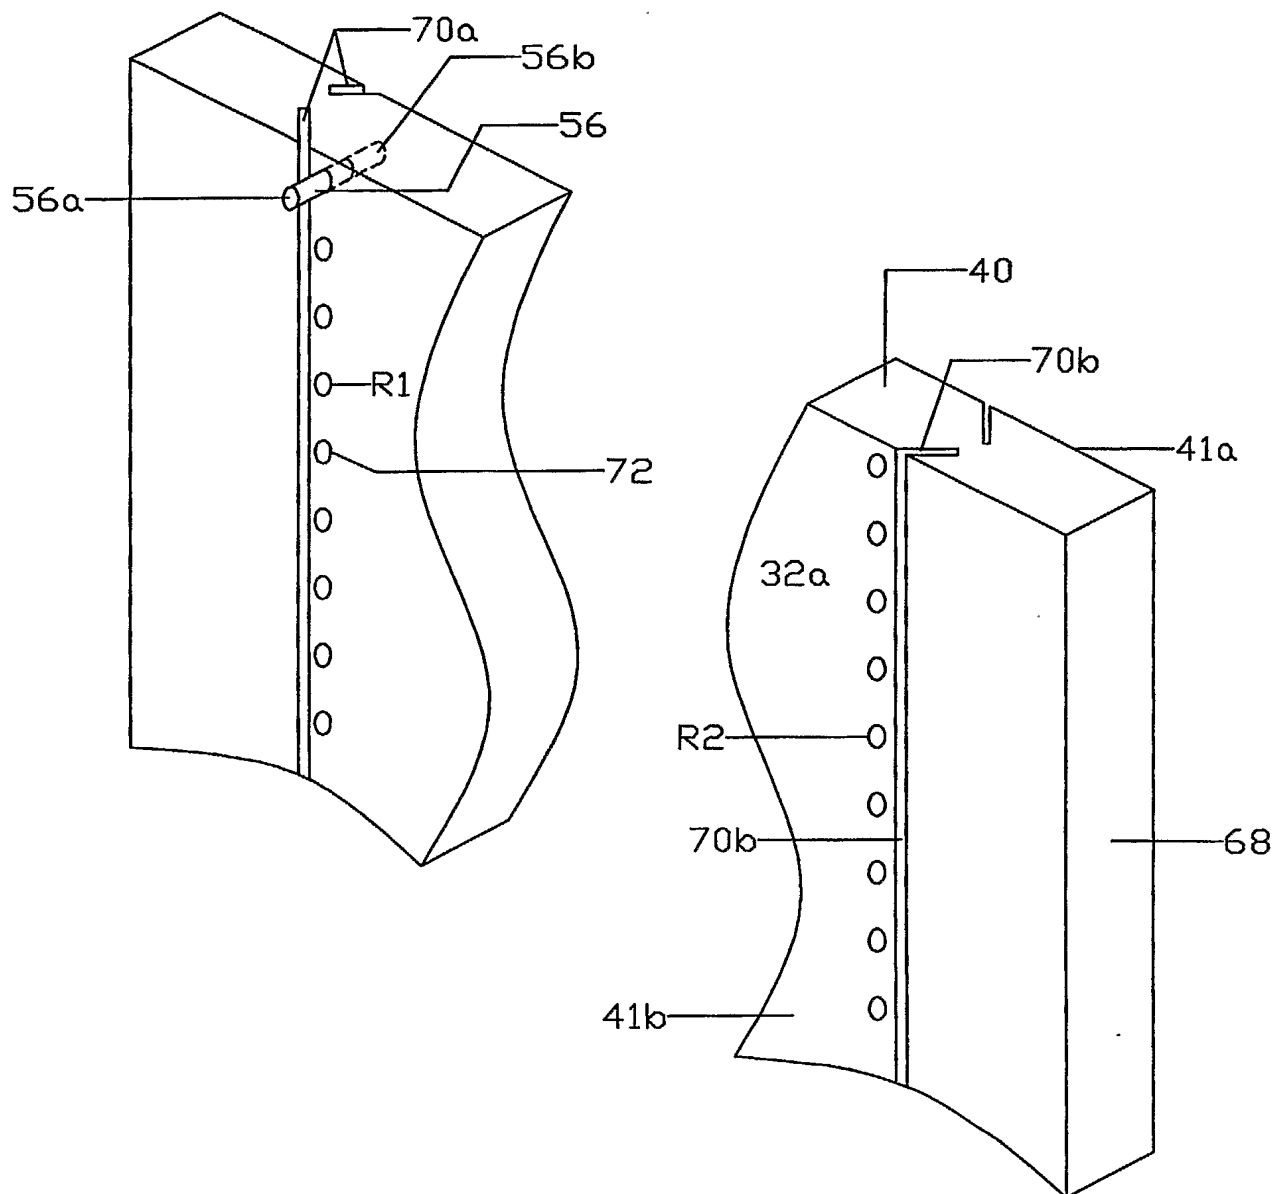
**Fig. 15**

**Fig. 16**

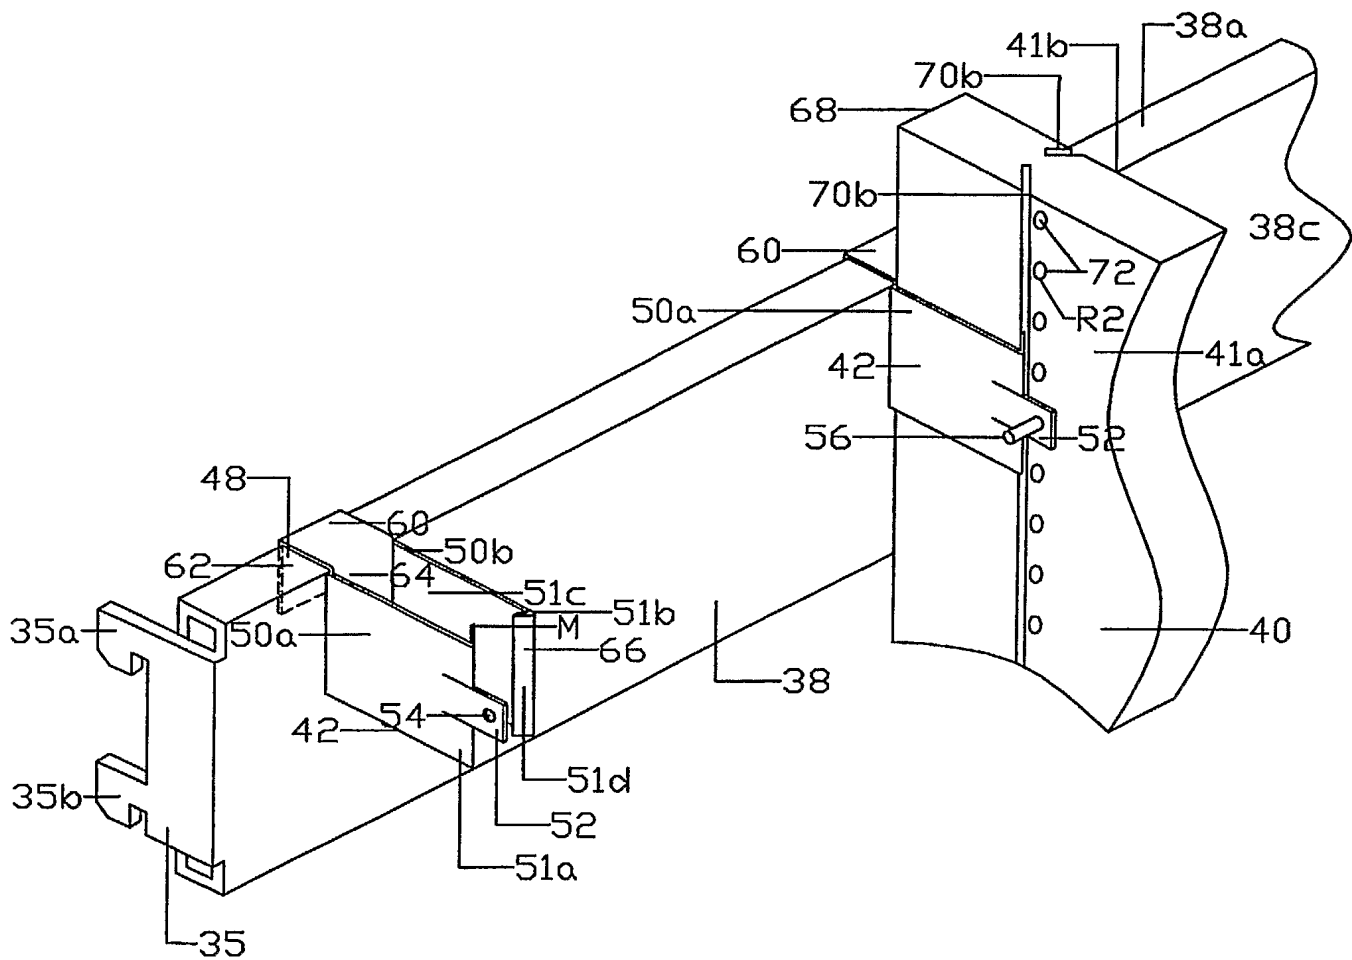


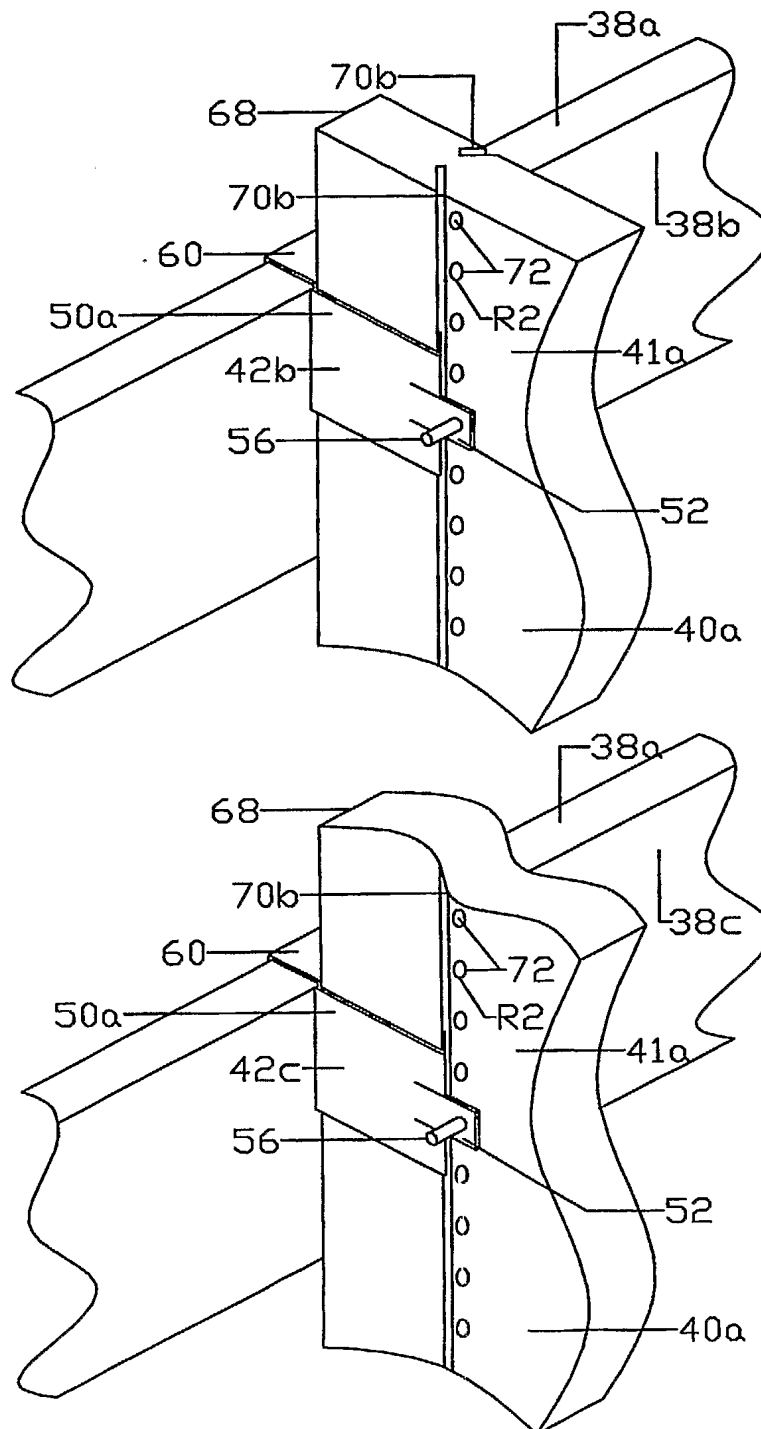**Fig. 16a**


**Fig. 17**

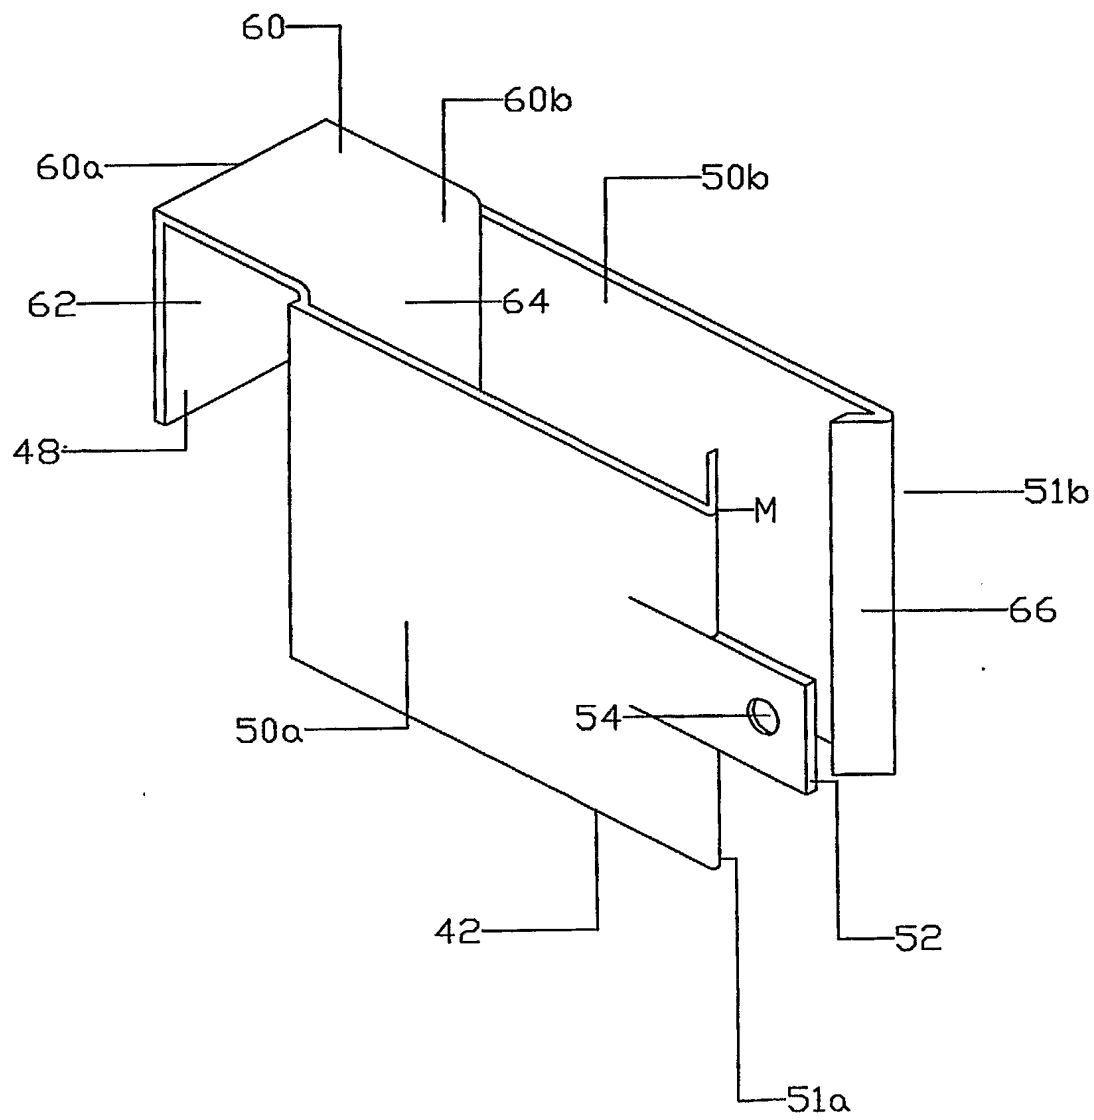


**Fig. 17A**

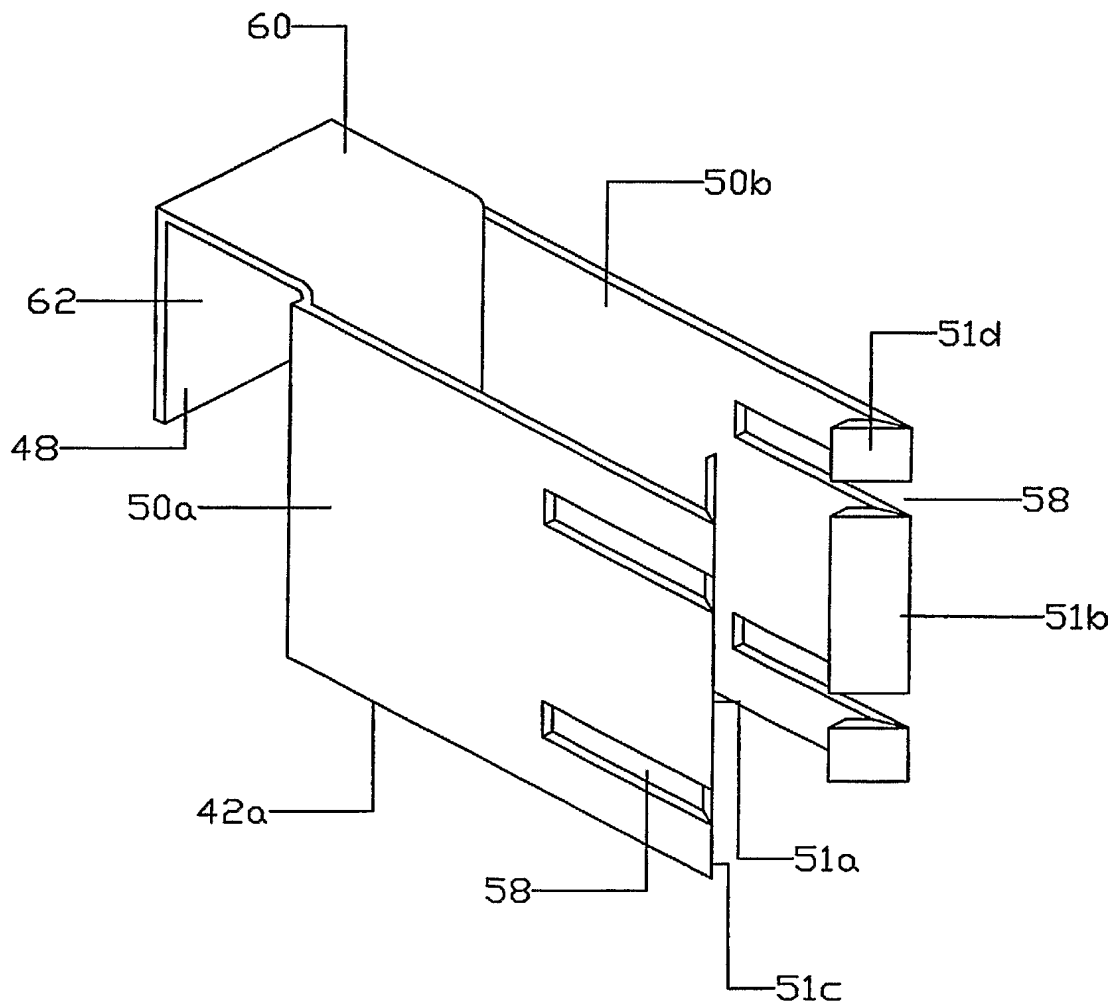


**Fig. 17B**

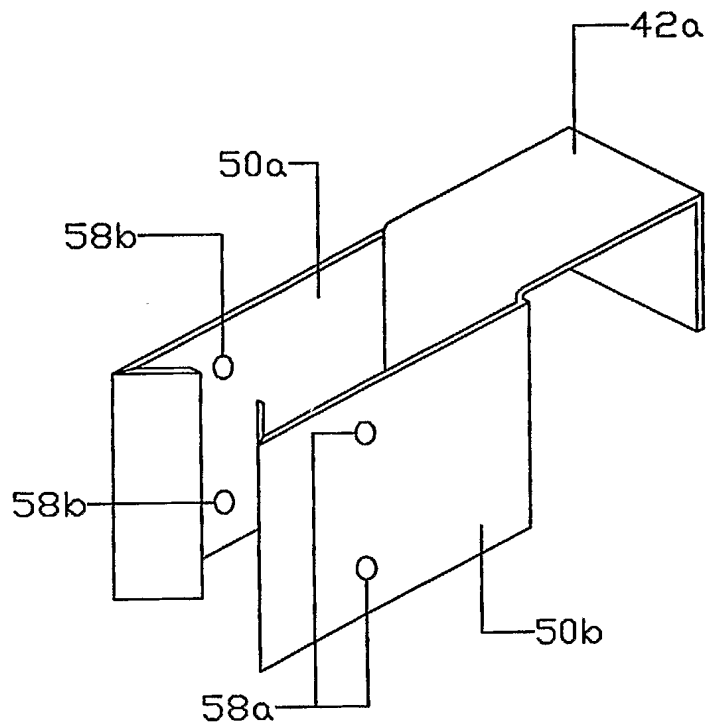


**Fig. 18**

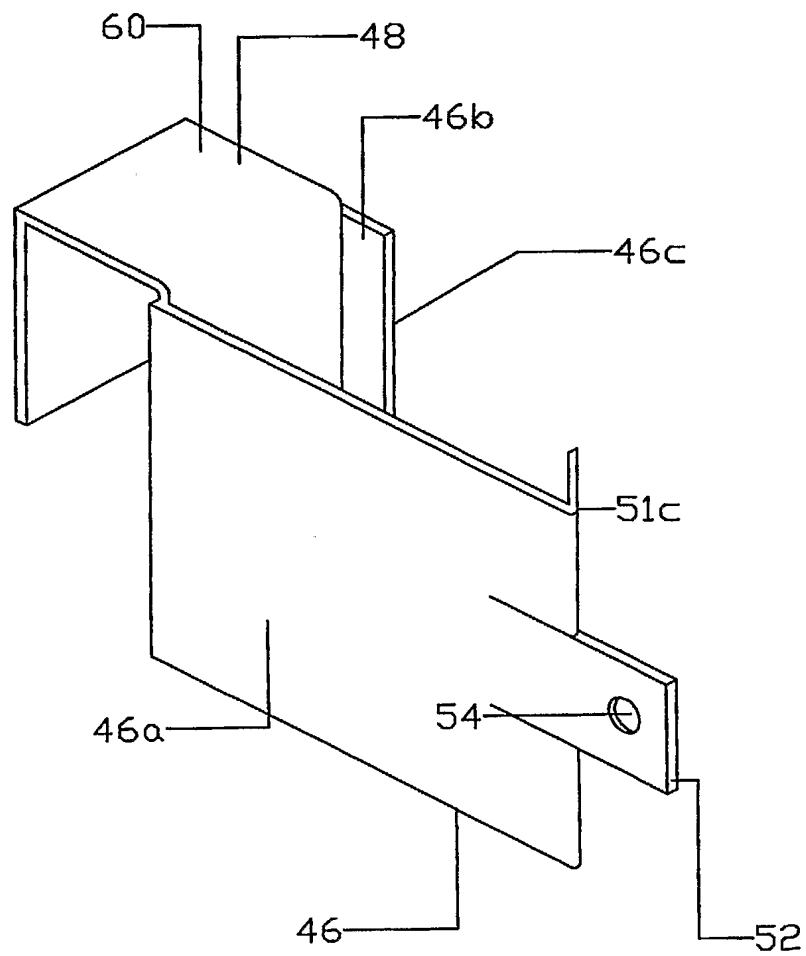


**Fig. 18A**

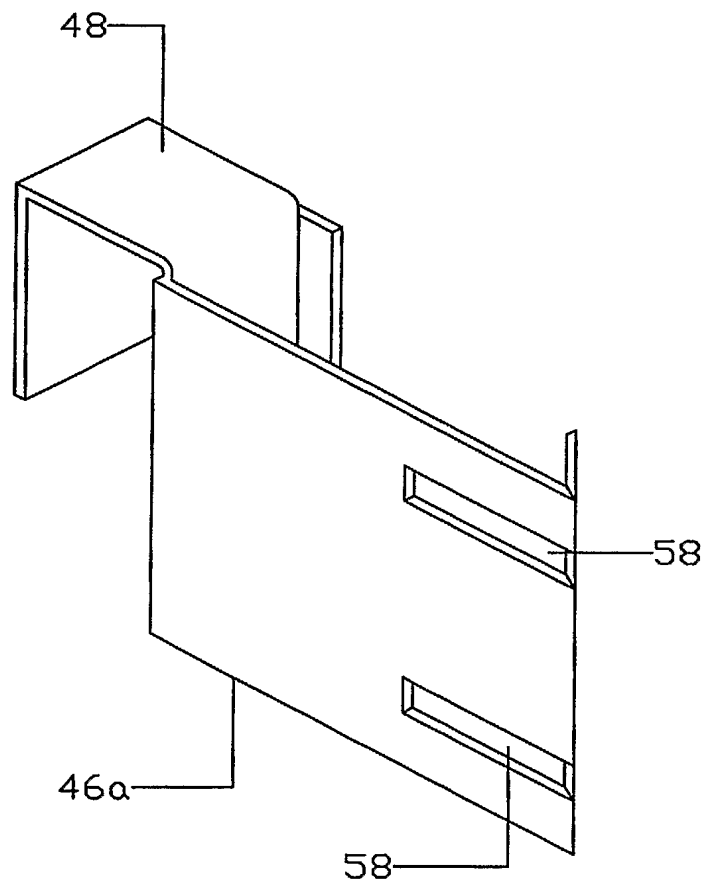


**Fig. 18B**

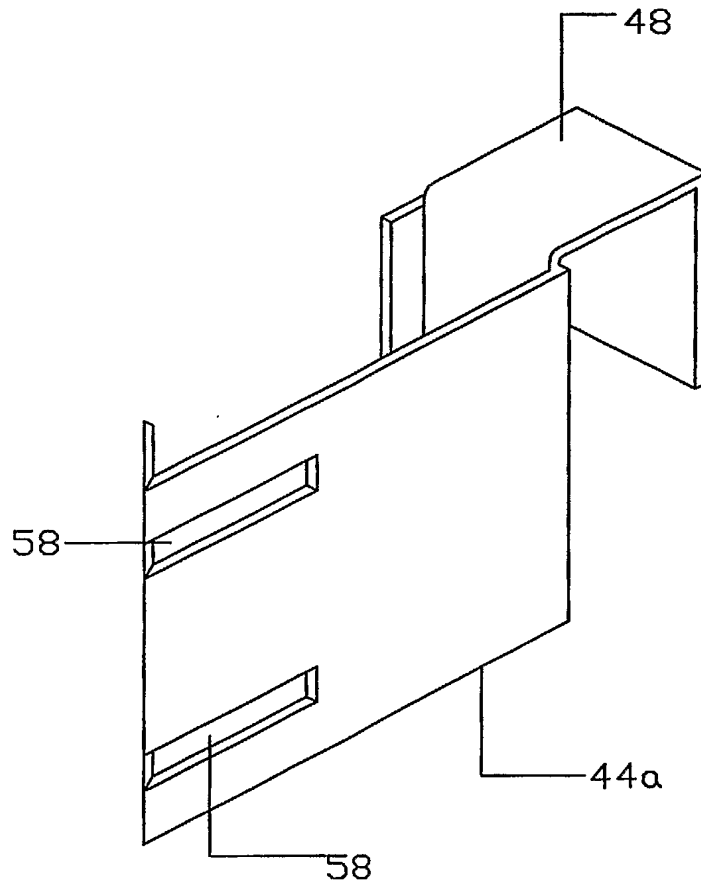


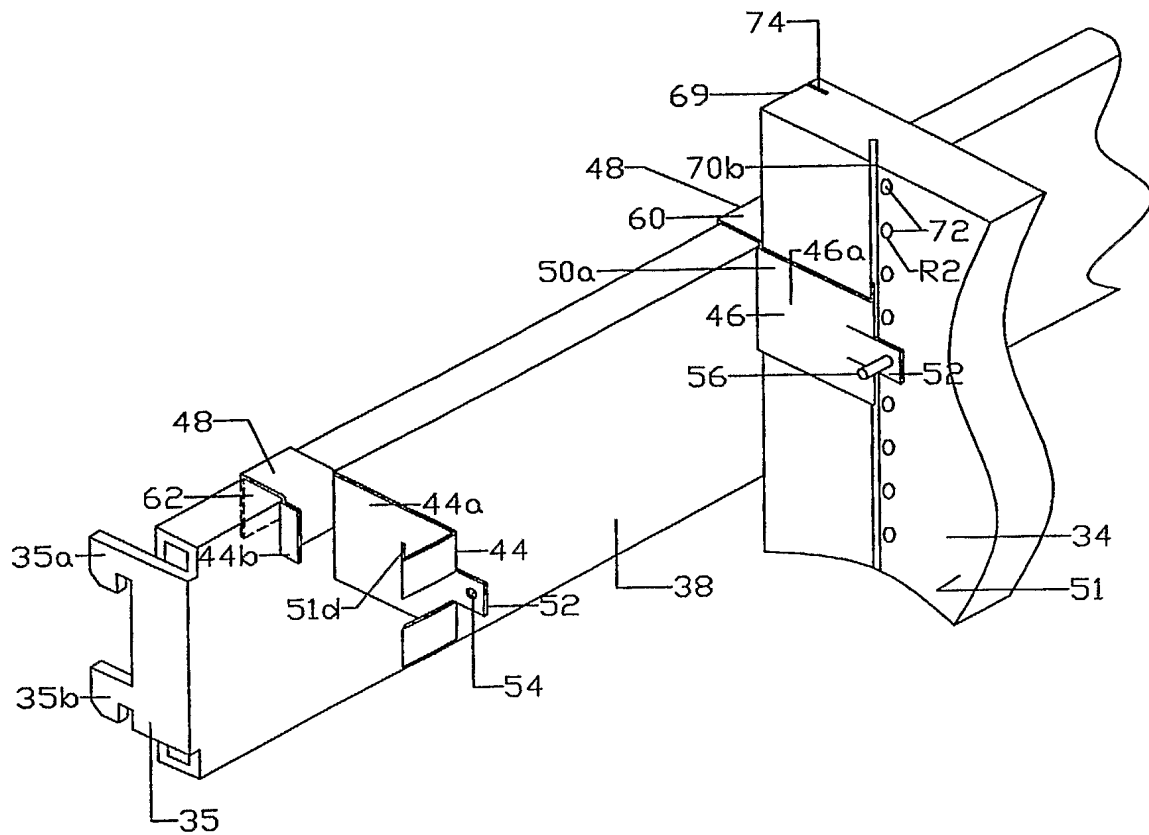
**Fig. 19**

**Fig. 20**

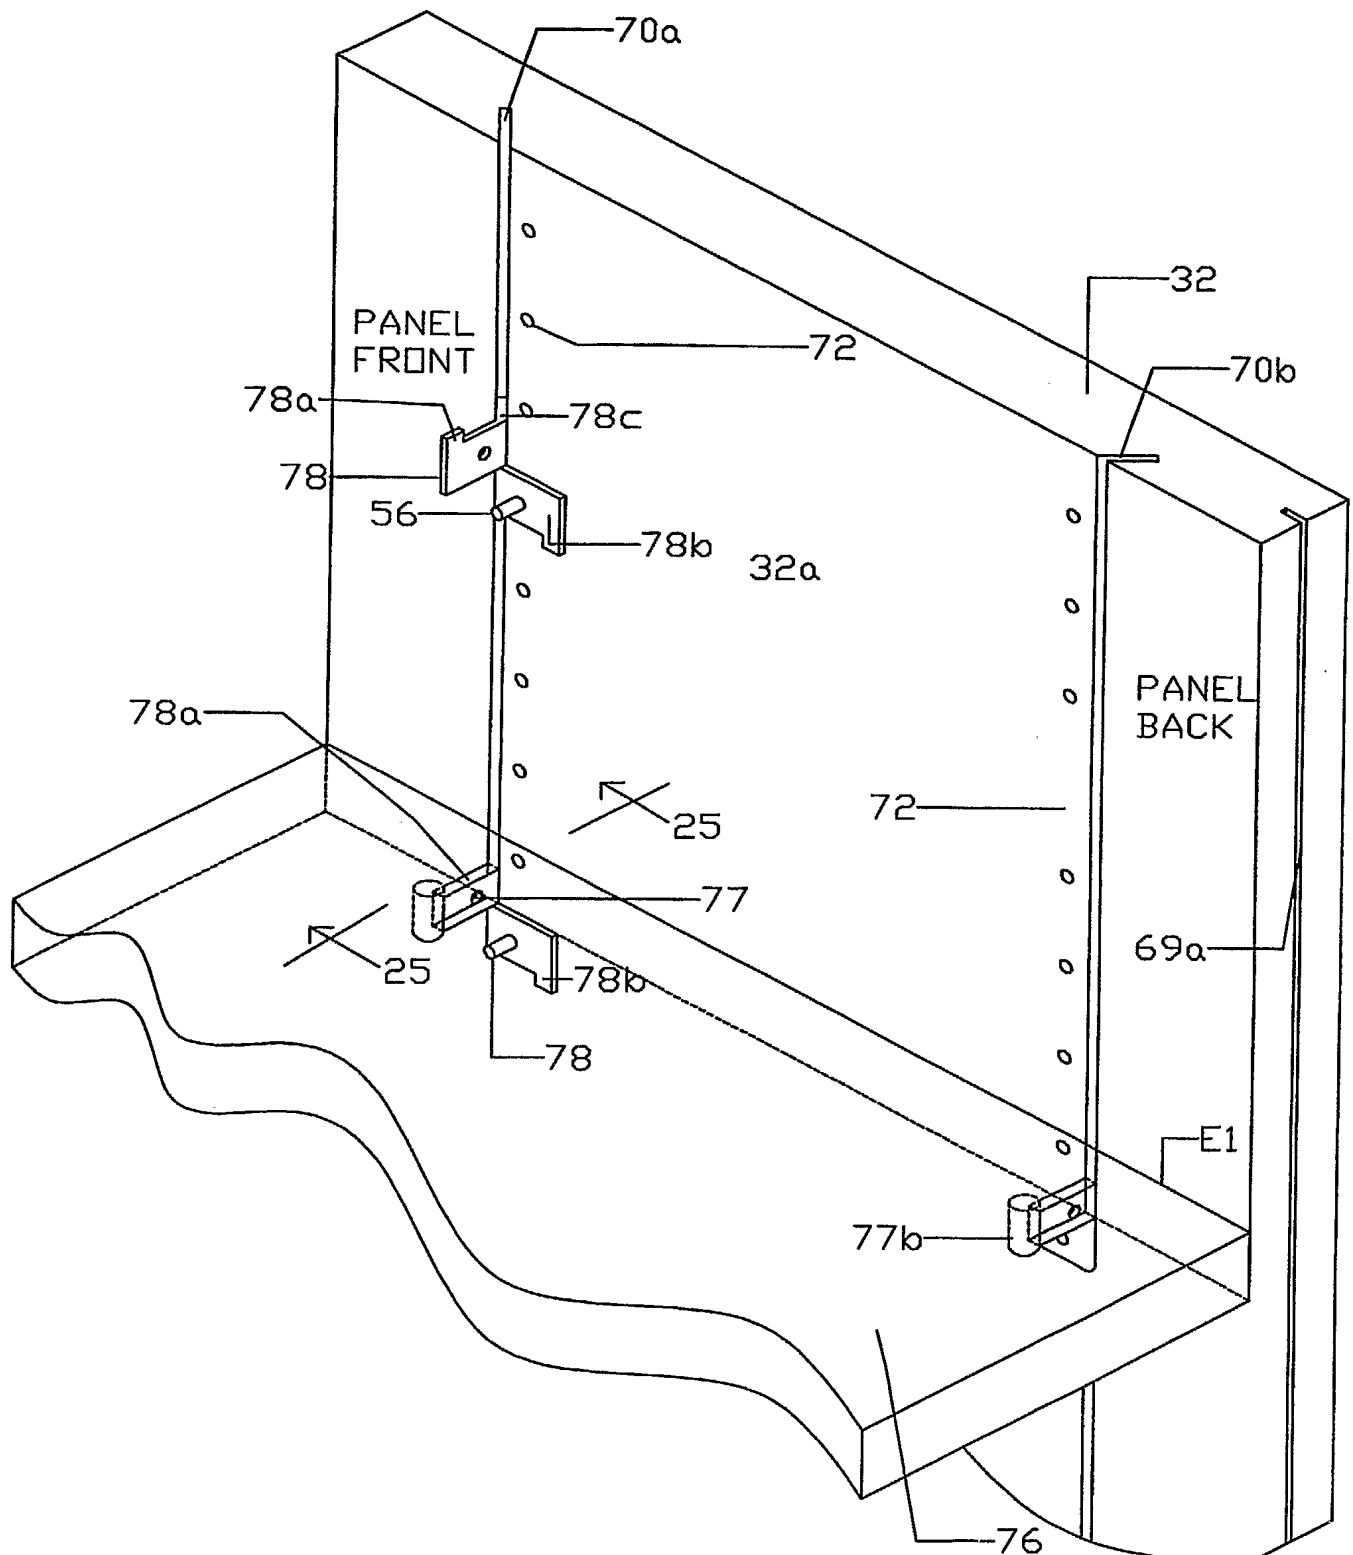


**Fig. 21**

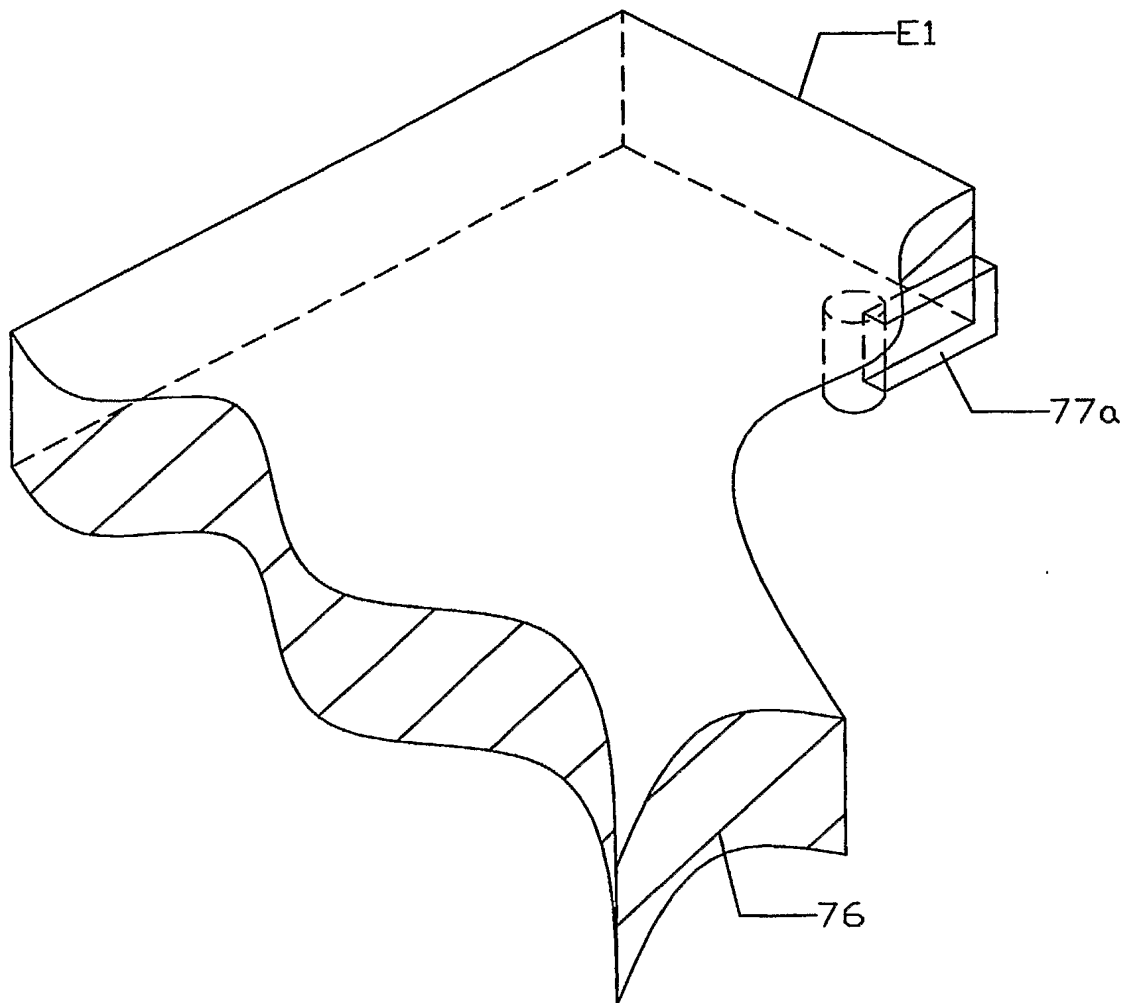


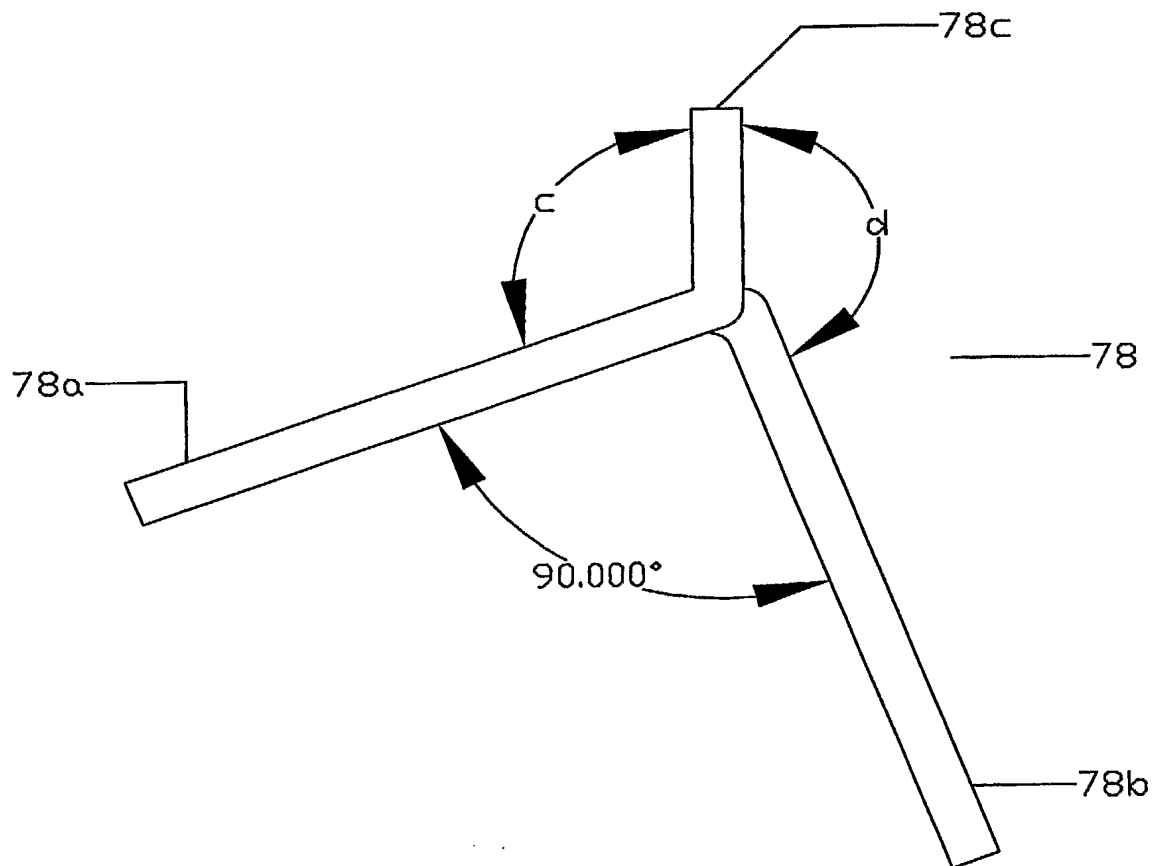
**Fig. 22**

**Fig. 23**

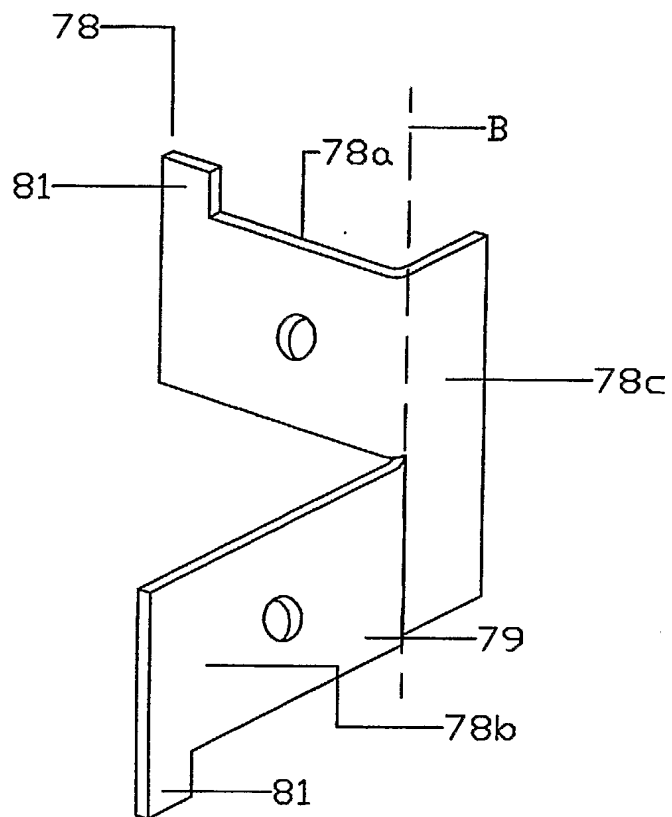


**Fig. 24**

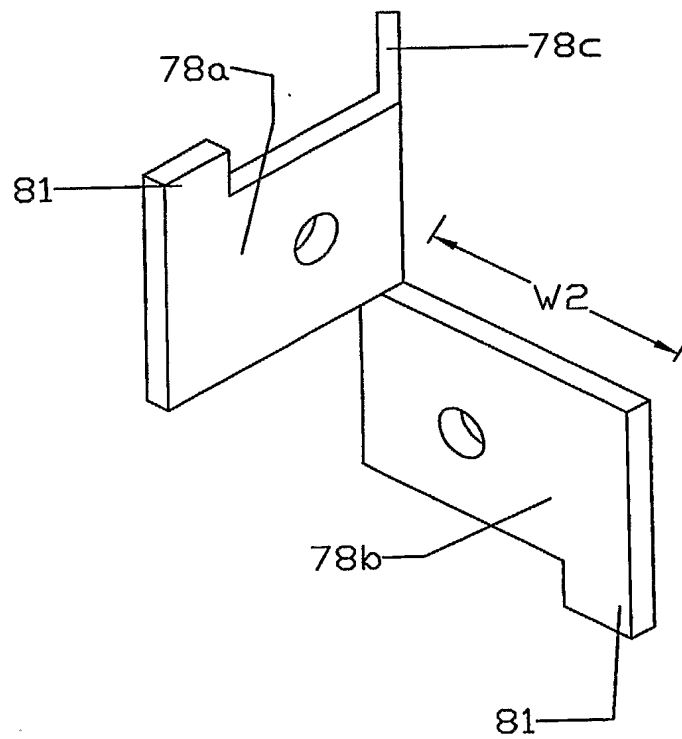


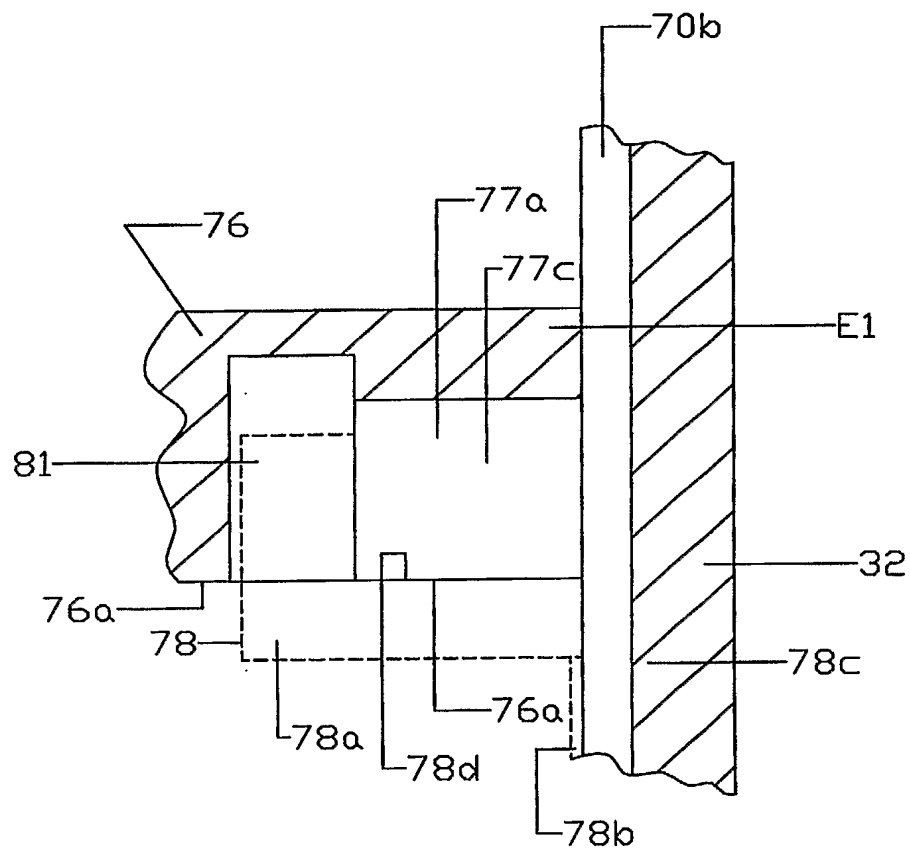
**Fig. 25**

**Fig. 26**

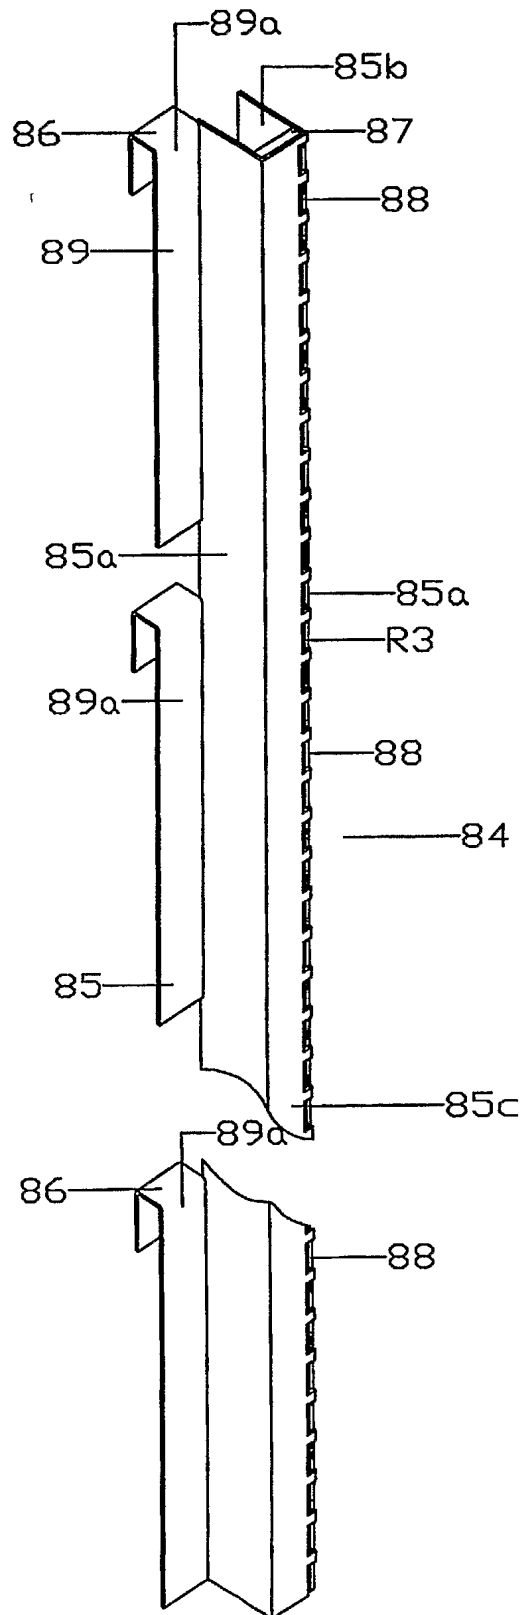


**Fig. 27**

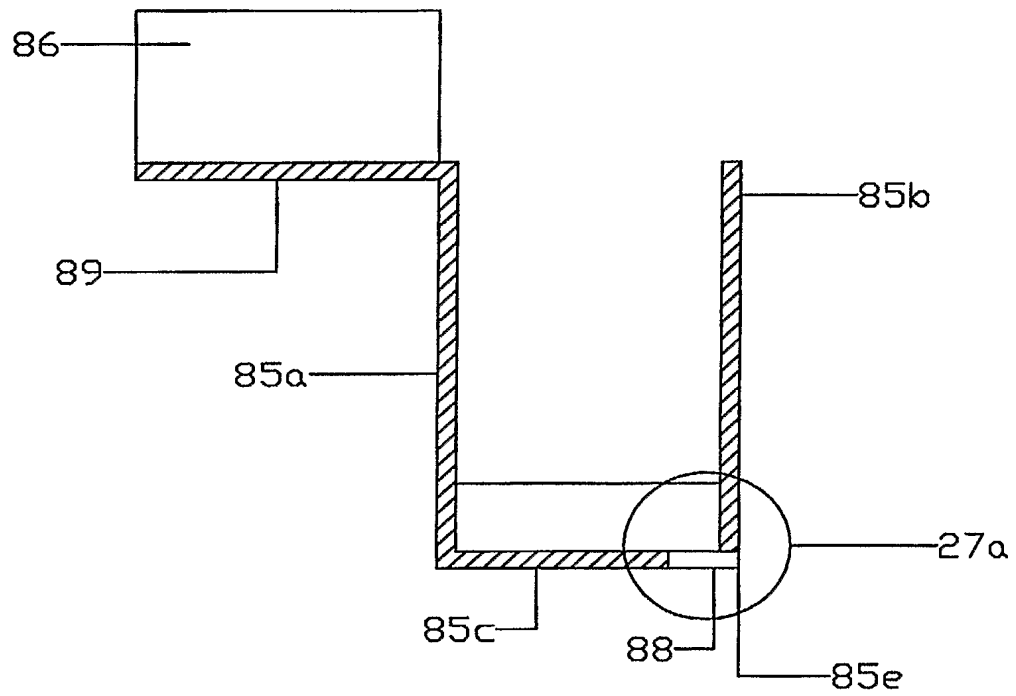


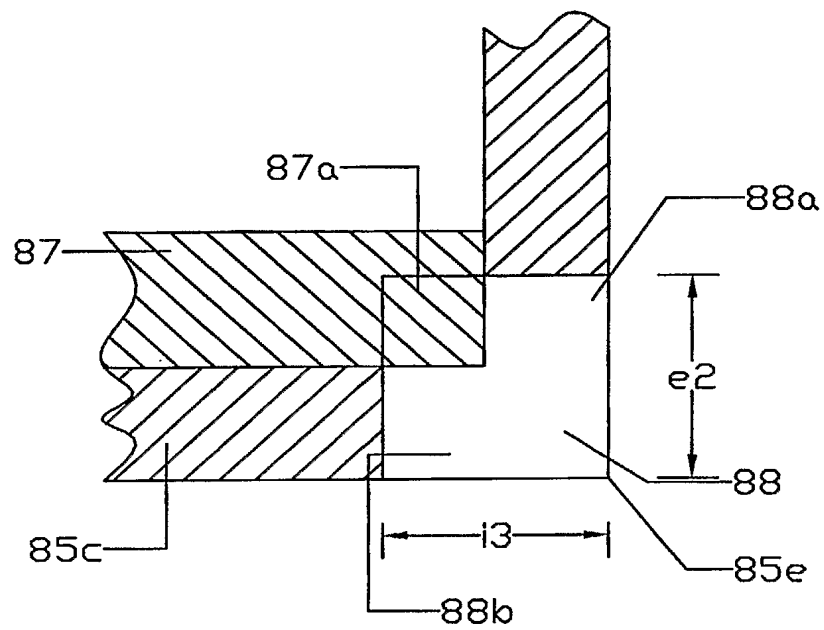**Fig. 27A**


**Fig. 27B**

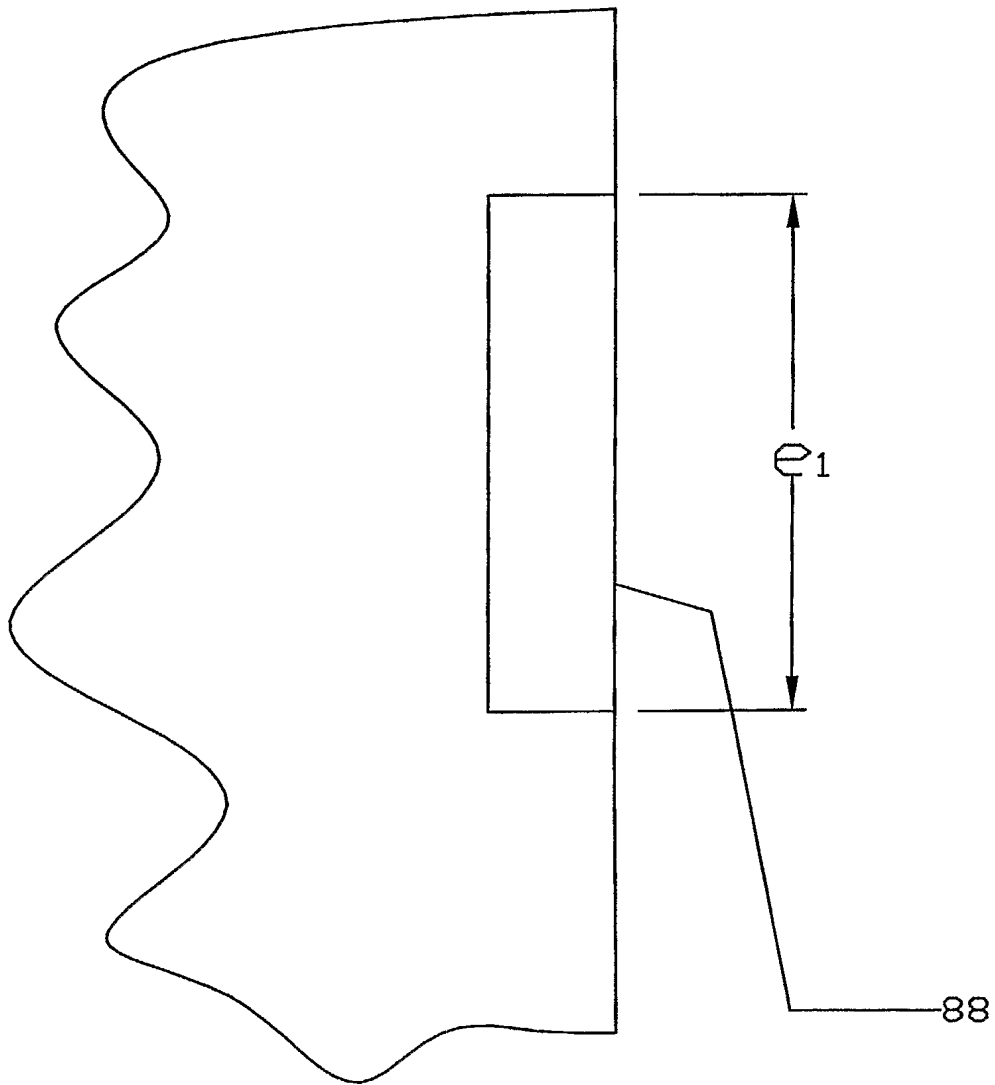


**Fig. 28**

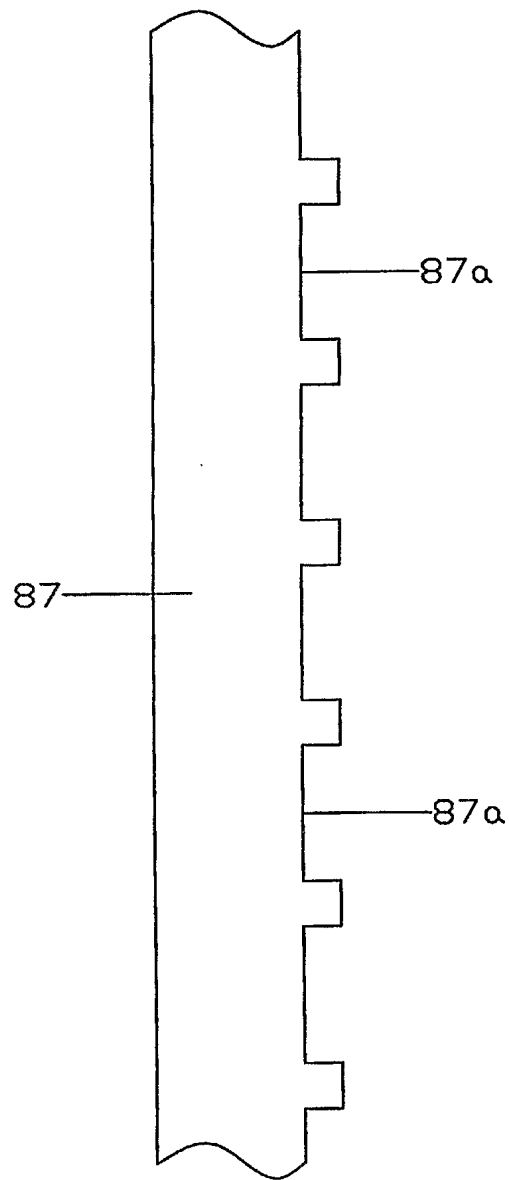


**Fig. 29**

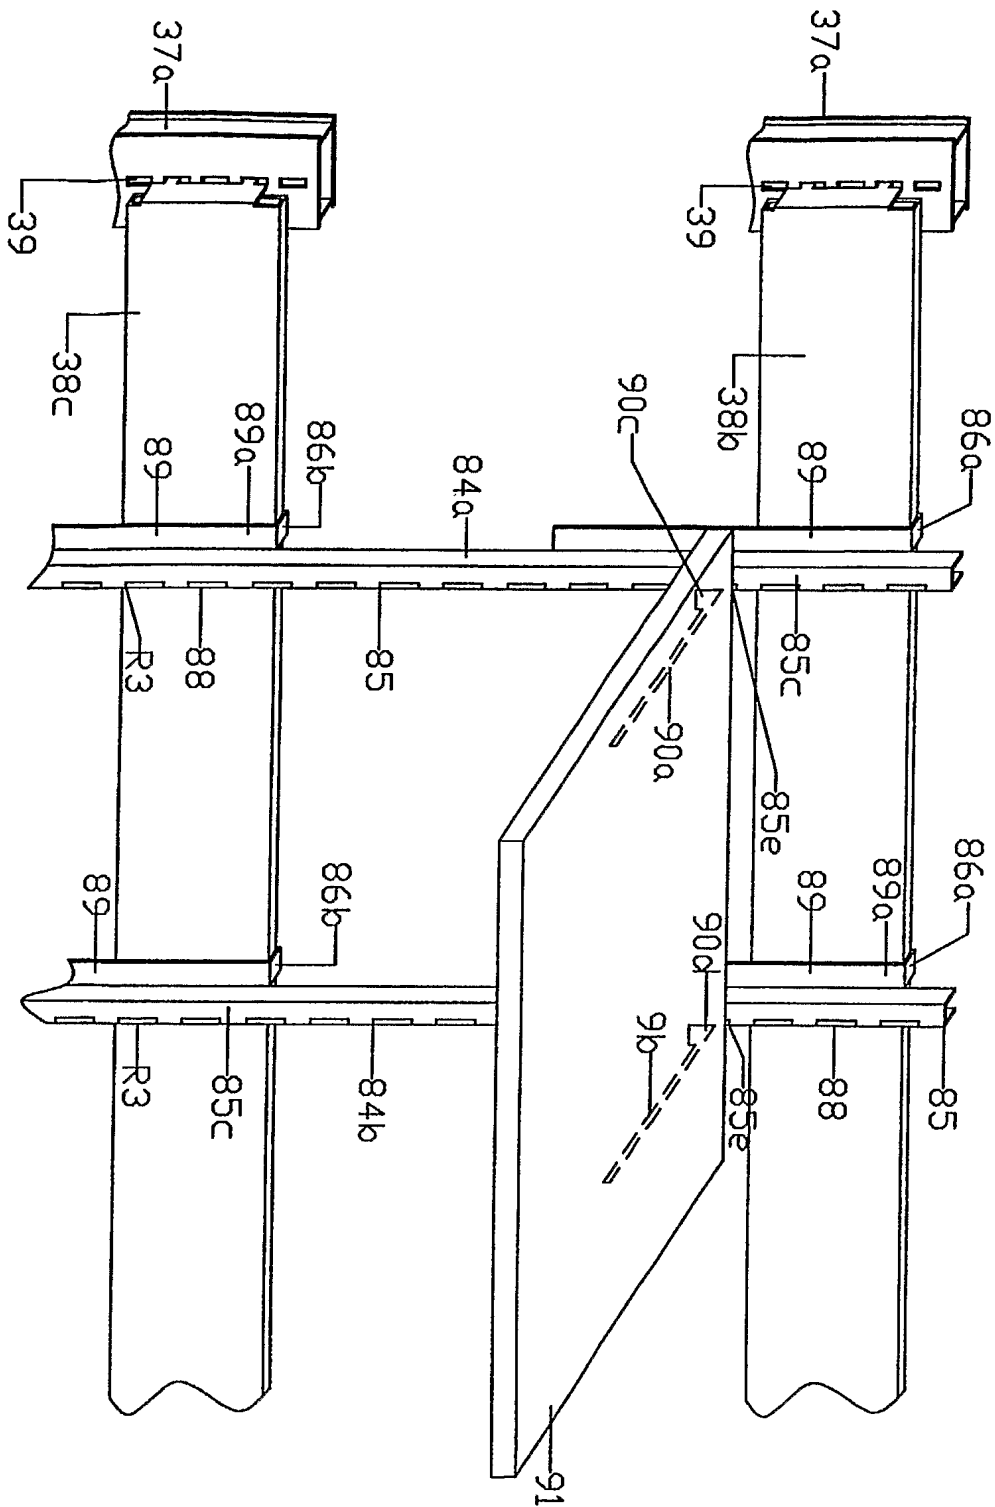


**Fig. 30**

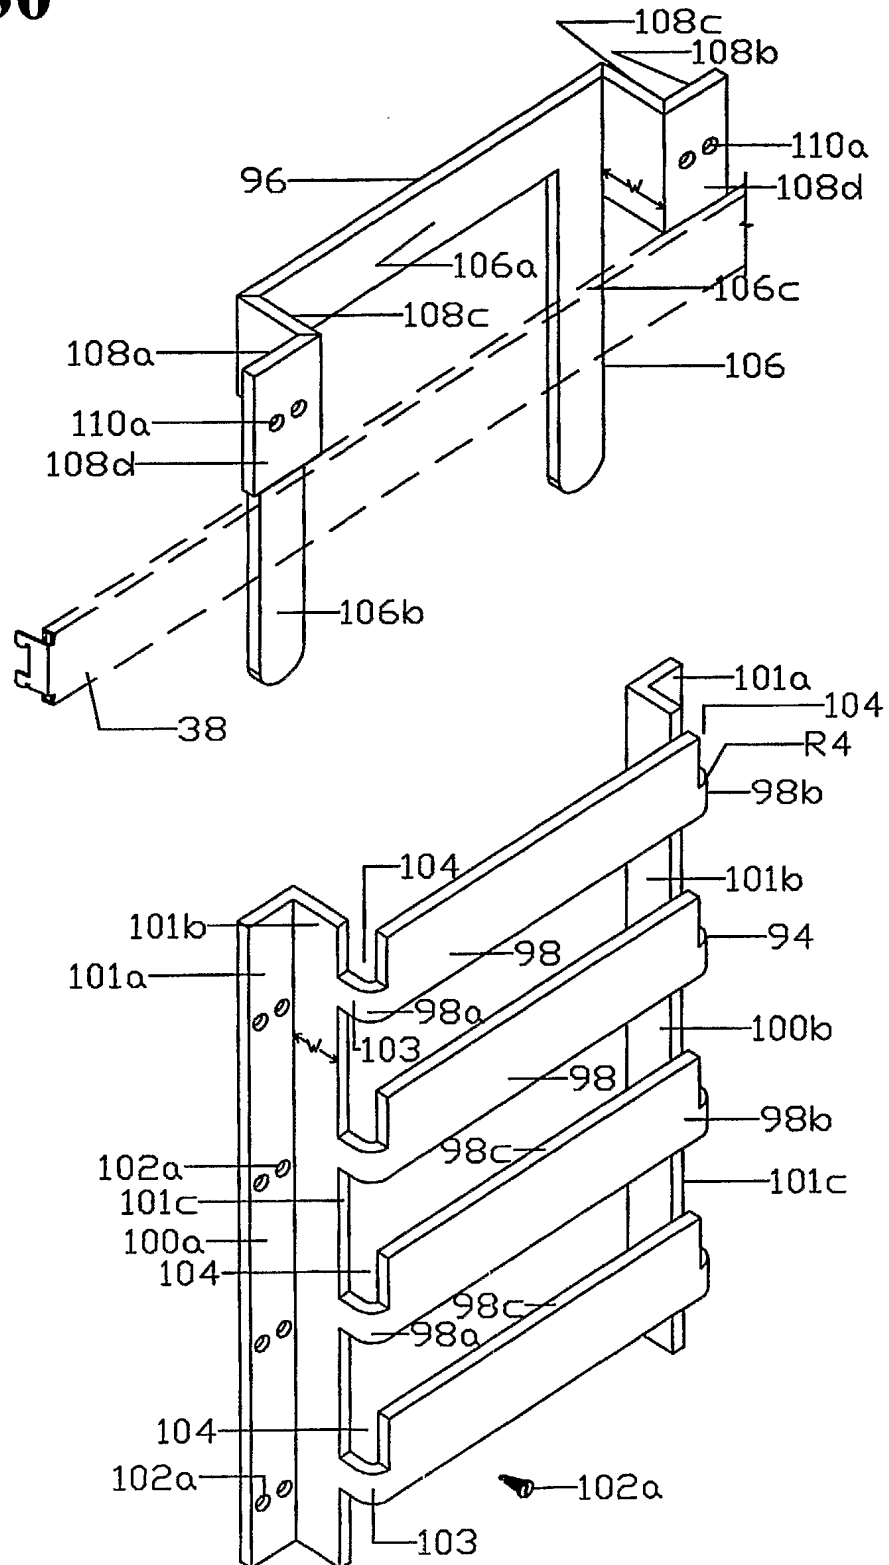



**Fig. 31**

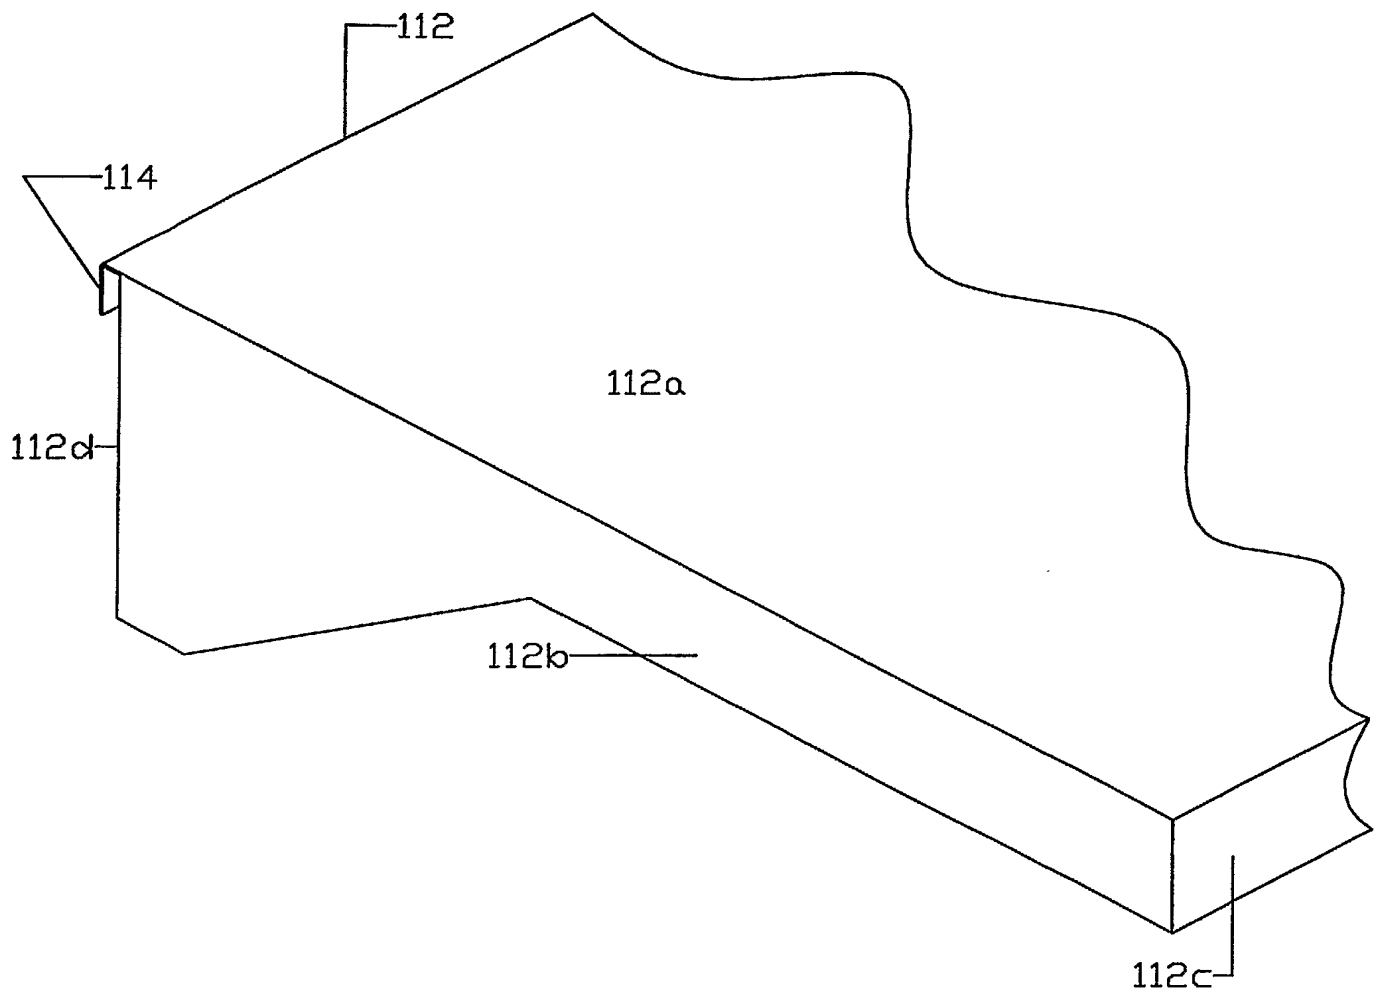


**Fig. 31A**

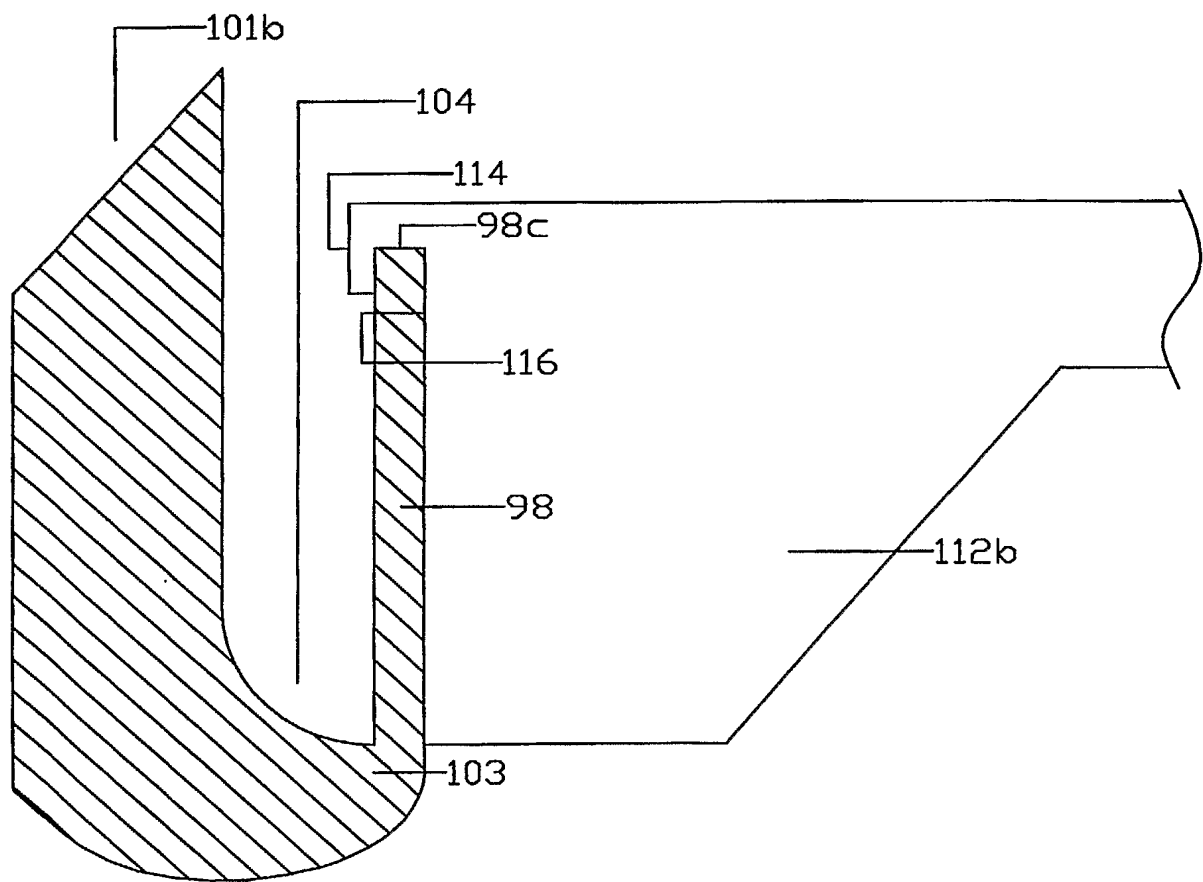


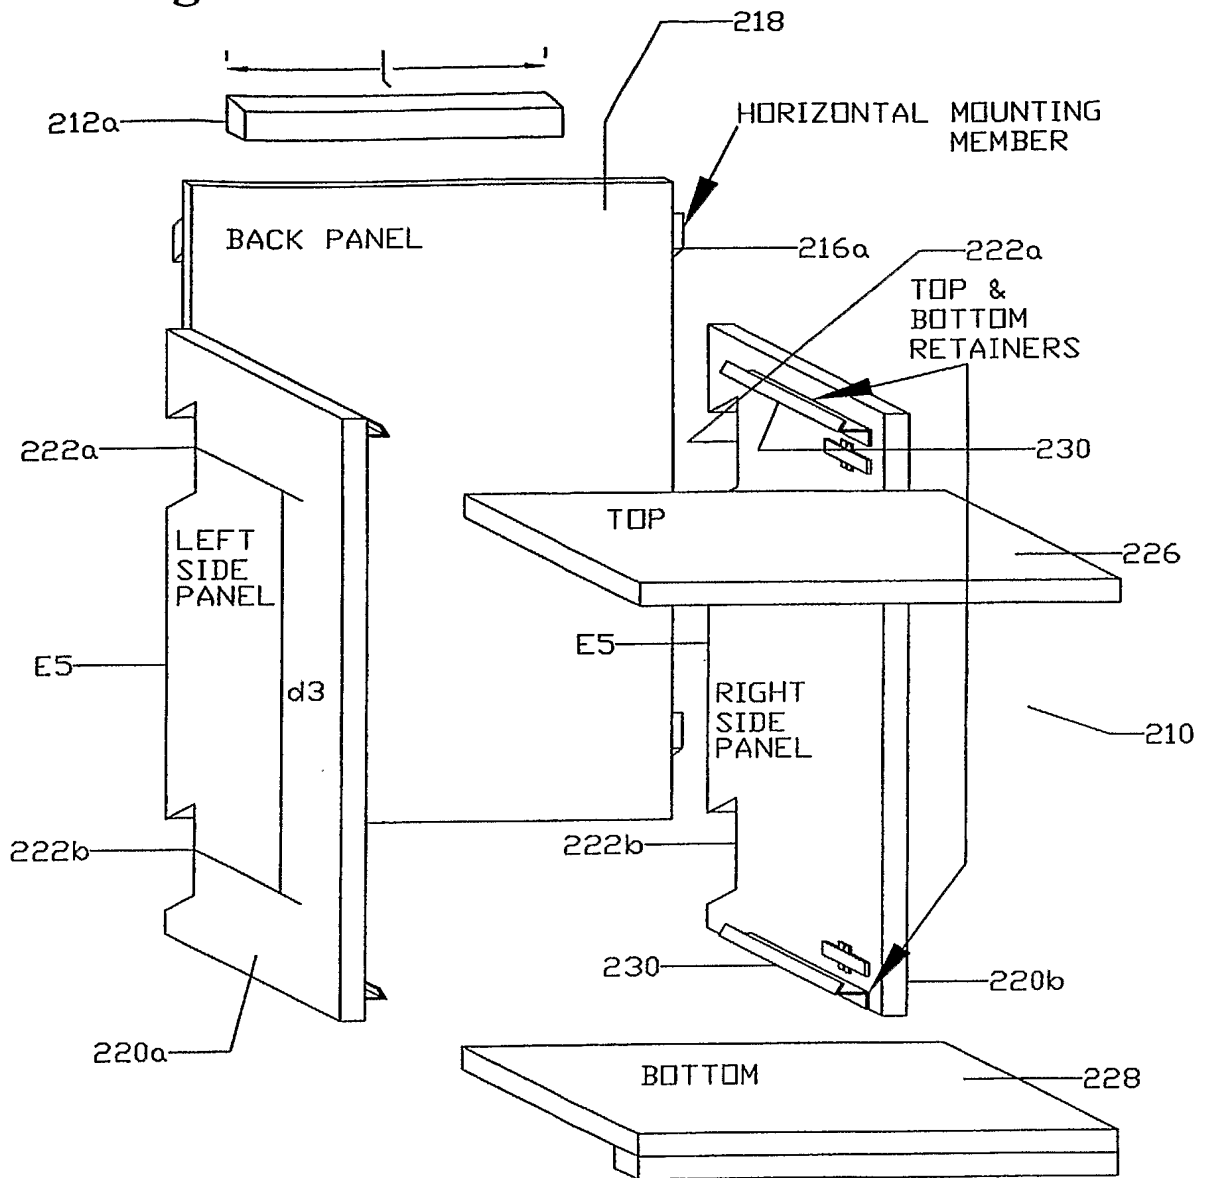
**Fig. 32**

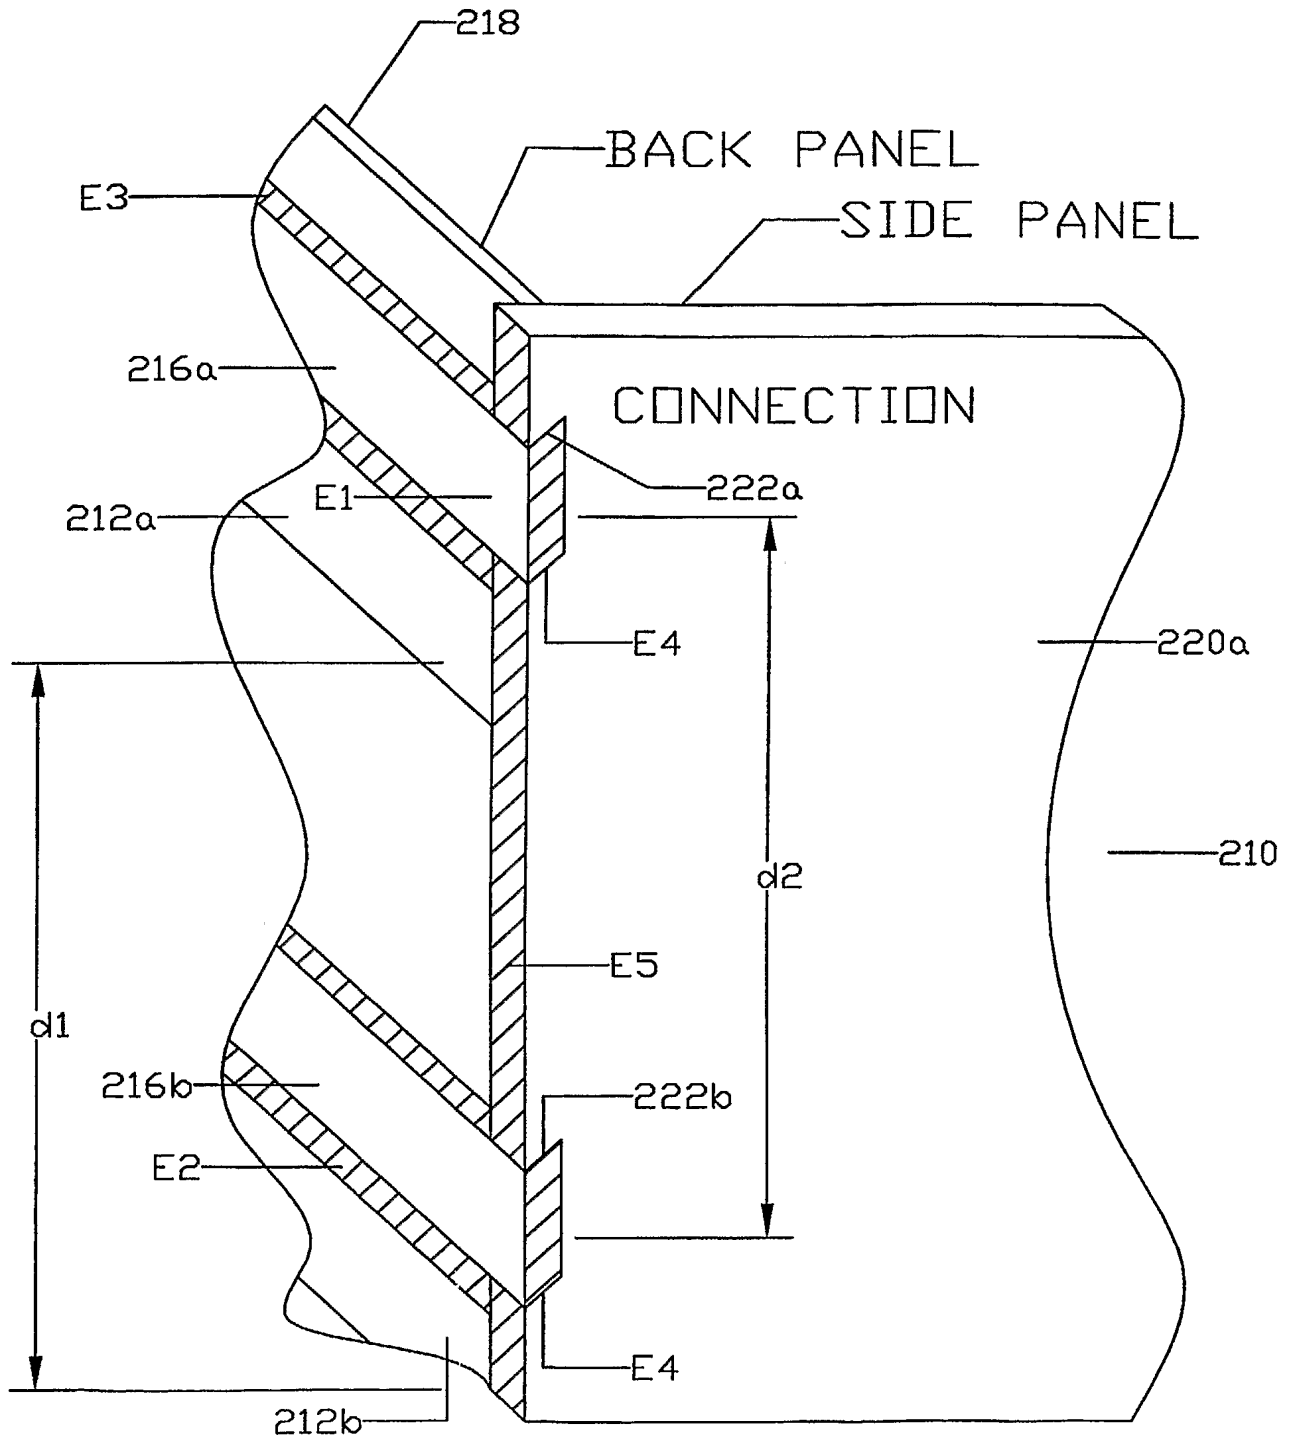**Fig. 32A**


**Fig. 32B**

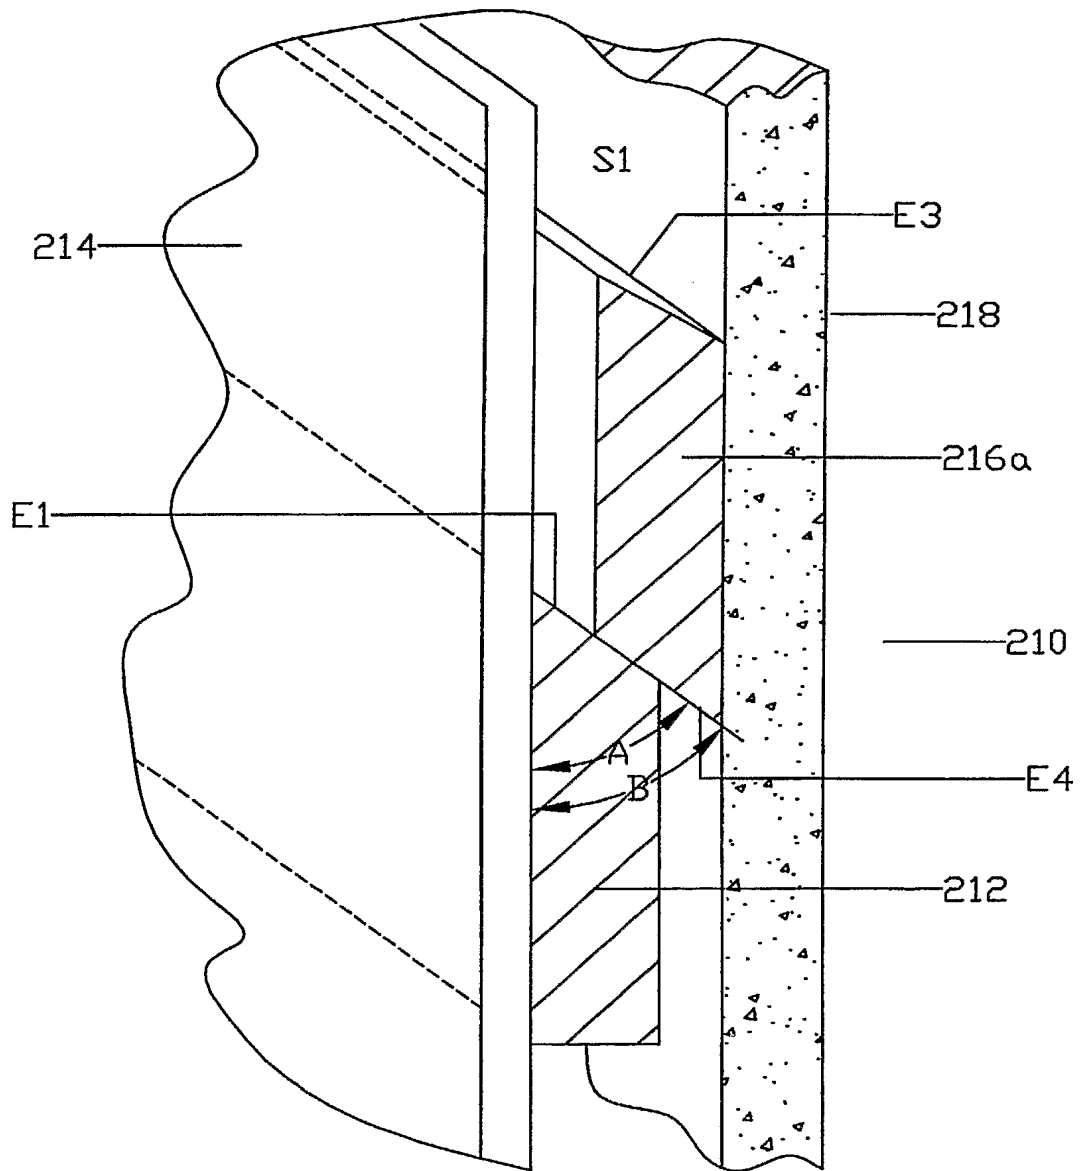

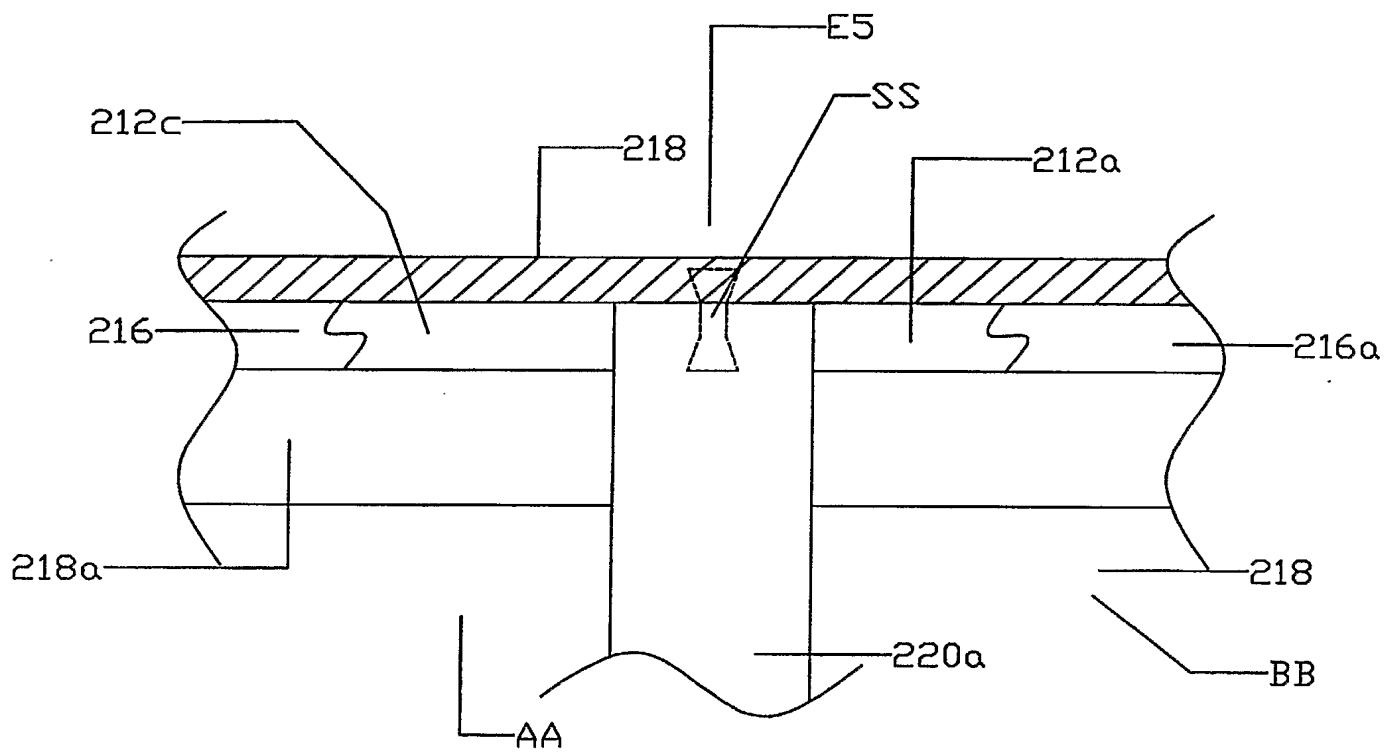
**Fig. 32C**

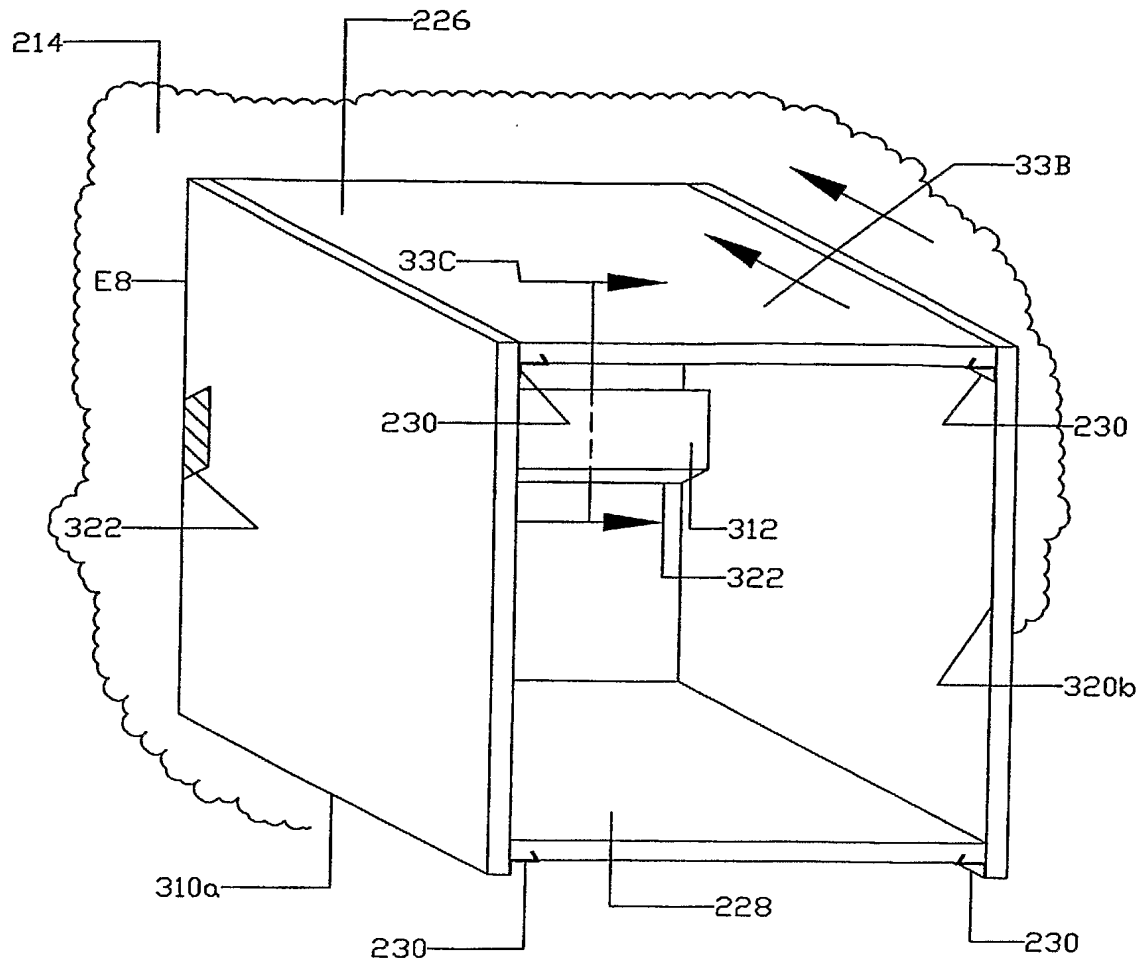**Fig. 33**


**Fig. 33A**

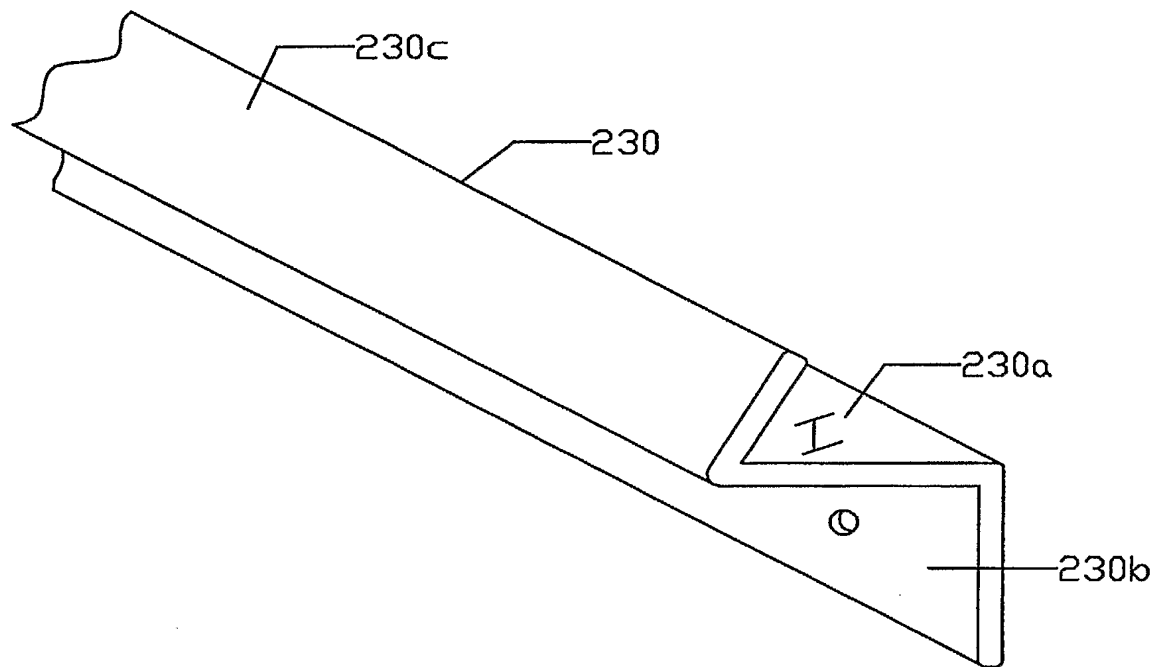

**Fig. 33B**

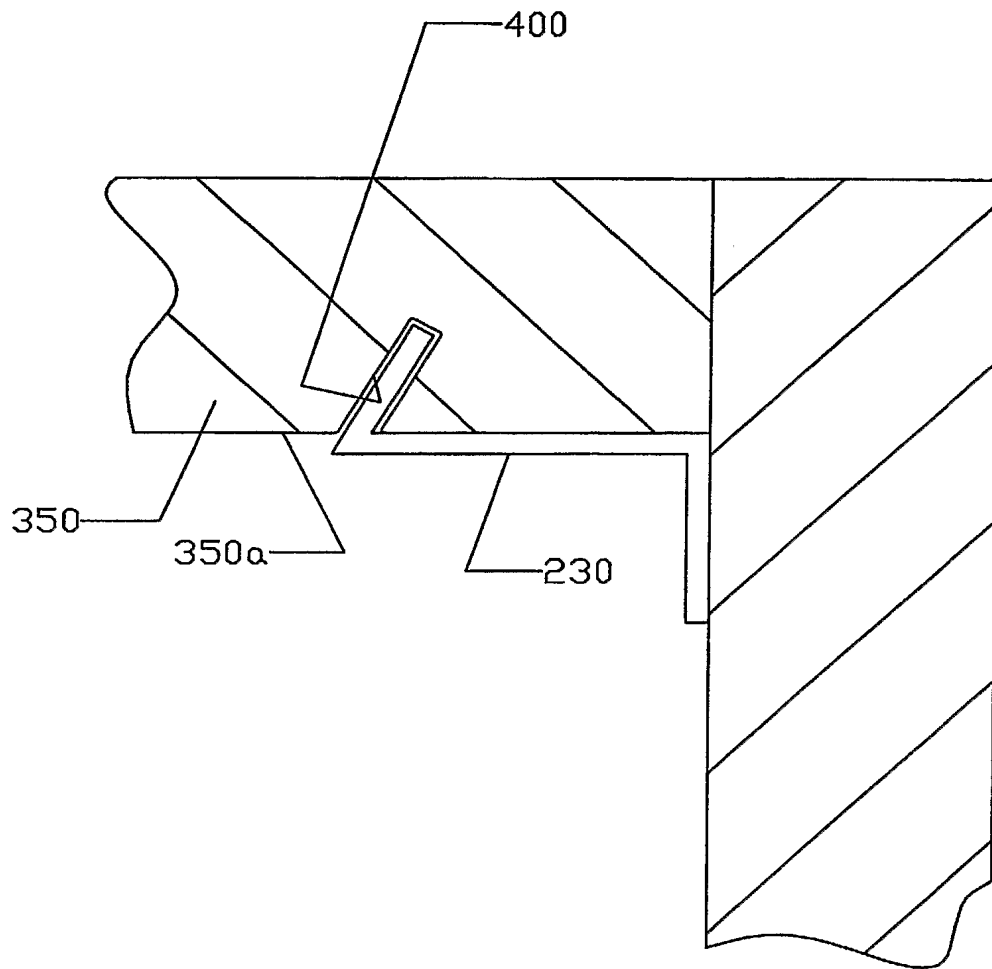


**Fig. 33C**

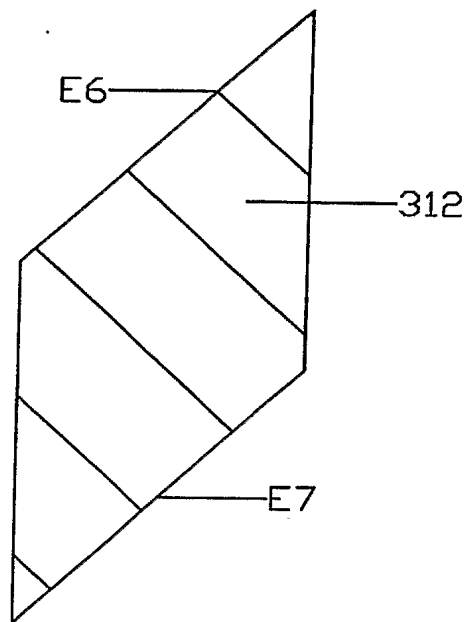

CUSTOM CABINETS (SAMPLE)  
PRE-ASSEMBLED BACKPANEL KIT  
FOR MODULAR CABINET LINE-UP

Fig. 34A

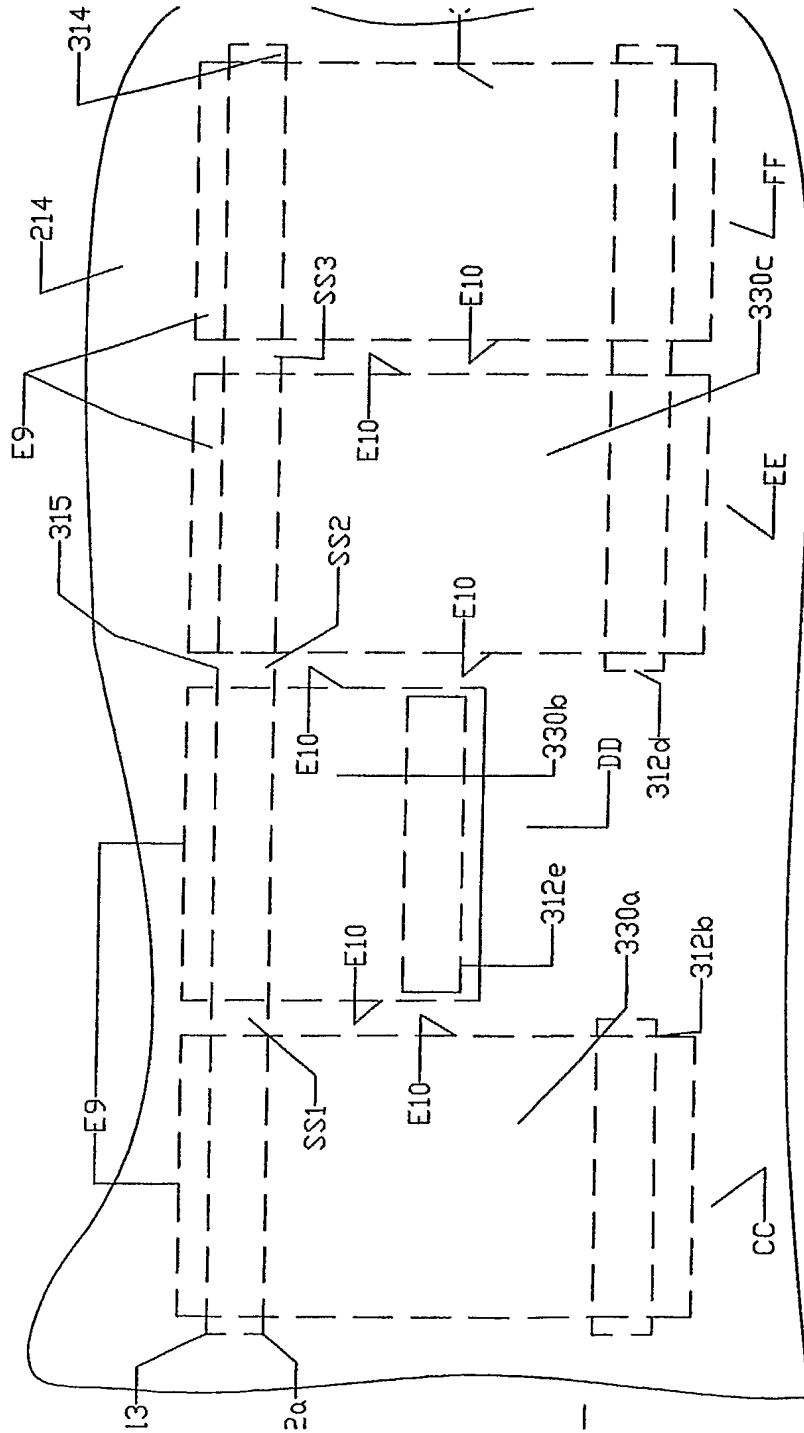

—310b

Fig. 34B

